

PREFACE

1. This "Part No. and Q'ty List of Element/Filter/Cartridge/Breather" covers cranes of the mentioned specification numbers in the columns on the "SPECIFICATION LIST OF ROUGH TERRAIN CRANE" of both DOMESTIC and OVERSEAS models.
2. The crane specification number is marked on the "Name plate" located on the crane operator's cabin.
3. The mentioned part numbers in the said list are showed latest ones as of December in 2006, check it with the "PART INTERCHANGEABLE LIST".
4. The following items should be informed us at the time of placing an order of spare parts to avoid a selection of incorrect parts.
 - 1) Crane model and serial number
 - 2) Crane specification number
 - 3) Engine model and serial number

CONTENTS

1. SPECIFICATION LIST OF ROUGH TERRAIN CRANE (DOMESTIC MODEL)
2. SPECIFICATION LIST OF ROUGH TERRAIN CRANE (OVERSEAS MODEL)
3. PARTS INTERCHANGEABLE LIST
4. Part No. and Q'ty List of Element/Filter/Cartridge/Breather for each models

PARTS INTERCHANGEABLE LIST

1. The below mentioned new part numbers are showed the latest number as of December in 2006.
2. The below mentioned part numbers may be changed without prior notice.

Description	New Part No.		Old Part No.
ELEMENT, OUTER (Air cleaner)	334-202-67510	←	347-810-45010
			346-700-15050
ELEMENT (Air breather, On hydraulic oil tank)	336-600-07511	←	336-600-07510
FILTER (Line filter on crane hydraulic oil circuit)	343-400-21700	←	366-200-15030
ELEMENT, SINGLE (Air cleaner)	347-805-27510	←	347-816-47510
ELEMENT, SINGLE (Air cleaner)	355-200-37520	←	363-611-55010
BREATHER (Air breather, On transmission)	363-501-15280	←	346-720-25150
ELEMENT, OUTER (Air cleaner)	363-605-25020	←	347-802-47530
CARTRIDGE (Fuel filter of Cummins engine)	363-612-61210	←	363-612-65050
FILTER (Line filter on crane hydraulic oil circuit)	366-402-75040	←	366-425-75030
ELEMENT (Filter on crane hydraulic oil circuit)	366-517-15300	←	366-429-25010
			366-200-25040
ELEMENT (Oil filter on torque converter circuit)	366-712-79510	←	366-712-75070
			366-712-75010
ELEMENT (Air breather, On hydraulic oil tank)	531-560-05011	←	531-560-05010
CARTRIDGE (Fuel filter of Mitsubishi engine)	ME015254	←	ME035393
CARTRIDGE / ELEMENT (Oil filter of Mitsubishi engine)	ME121789	←	ME054334
CARTRIDGE / ELEMENT (Oil filter of Mitsubishi engine)	ME130968	←	ME074013
CARTRIDGE / ELEMENT (Oil filter of Mitsubishi engine)	ME121788	←	3124053054
CARTRIDGE / ELEMENT (Oil filter of Nissan engine)	15274-99289	←	15274-99227
CARTRIDGE / ELEMENT (Oil filter of Nissan engine)	15274-99985	←	15274-99789
CARTRIDGE / ELEMENT (Oil filter of Nissan engine)	15274-99986	←	15274-99788
CARTRIDGE (Fuel filter of Hino engine)	23401-1133	←	23401-1132
CARTRIDGE (Fuel filter of Cummins engine)	FS19616	←	3991498

SPECIFICATION LIST OF ROUGH TERRAIN CRANE (OVERSEAS MODEL)

Crane Model	Spec. No.	Engine		
		Ass'y P/No.	Maker	Model
TR-80EX-1	TR-80E-1-00101	363-607-00001	Hino	W04C-T
TR-150XL-4	TR-150-4-00101	363-613-00000	Cummins	QSB3.9-30TAA
	TR-150-4-00102	363-613-00102	Cummins	QSB3.9-30TAA
TR-200E-1	TR-200E-1-00101	363-602-50001	Mitsubishi	6D15W
	TR-200E-1-00103	363-602-50001	Mitsubishi	6D15W
	TR-200E-1-00301	363-602-50001	Mitsubishi	6D15W
	TR-200E-1-00302	363-602-50001	Mitsubishi	6D15W
TR-200EX-2	TR-200E-2-00101	363-610-30000	Mitsubishi	6D14-T
	TR-200E-2-00102	363-610-30000	Mitsubishi	6D14-T
	TR-200E-2-00201	363-607-40000	Mitsubishi	6D14-T
TR-200EXC-3	TR-200E-3-00101	363-611-30000	Mitsubishi	6D16-TUA
TR-230E-1	TR-230E-1-01102	363-600-30000	Nissan	ND604
	TR-230E-1-01112	363-600-30000	Nissan	ND604
	TR-230E-1-01222	363-601-00000	Nissan	ND604
	TR-230E-1-01401	363-604-30000	Nissan	NE603
TR-250E-1	TR-250E-1-00101	363-602-20000	Hino	H06C
	TR-250E-1-00201	363-602-20000	Hino	H06C
	TR-250E-1-00301	363-603-10000	Mitsubishi	6D15
	TR-250E-1-00302	363-603-10000	Mitsubishi	6D15
	TR-250E-1-00401	363-602-20000	Hino	H06C
TR-250EX-2	TR-250E-2-00101	363-610-30000	Mitsubishi	6D14-T
	TR-250E-2-00102	363-610-30000	Mitsubishi	6D14-T
	TR-250E-2-00201	363-607-40000	Mitsubishi	6D14-T
	TR-250E-2-00301	363-607-40000	Mitsubishi	6D14-T
TR-250EX-3	TR-250E-3-00101	363-610-70000	Mitsubishi	6D16-TUA
	TR-250E-3-00102	363-610-70000	Mitsubishi	6D16-TUA
TR-280XL	TR-200E-2-00101	363-610-30000	Mitsubishi	6D14-T
	TR-200E-2-00102	363-610-30000	Mitsubishi	6D14-T
	TR-200E-2-00201	363-607-40000	Mitsubishi	6D14-T
TR-300E-1	TR-300E-1-00101	363-601-70001 (560007~)	Nissan	PD603
		363-601-70000 (~560006)	Nissan	PD603
	TR-300E-1-00102	363-603-00000	Mitsubishi	6D22
	TR-300E-1-00103	363-603-00000	Mitsubishi	6D22
	TR-300E-1-00104	363-601-70001	Nissan	PD603

TR-300EX-2	TR-300E-2-00101	363-606-00000	Mitsubishi	6D16-T
	TR-300E-2-00201	363-606-70000	Mitsubishi	6D16-T
	TR-300E-2-00202	363-606-70000	Mitsubishi	6D16-T
TR-300EX-3	TR-300E-3-00101	363-610-70000	Mitsubishi	6D16-TUA
	TR-300E-3-00102	363-610-70000	Mitsubishi	6D16-TUA
TR-300XL	TR-250E-2-00101	363-610-30000	Mitsubishi	6D14-T
	TR-250E-2-00102	363-610-30000	Mitsubishi	6D14-T
TR-300XL-3	TR-300-3-00101	363-610-20000	Mitsubishi	6D16-TLEA
	TR-300-3-00102	363-610-20000	Mitsubishi	6D16-TLEA
TR-300XL-4	TR-300-4-00101	363-612-80001 (560790~)	Cummins	QSB5.9-30TAA
		363-612-80000 (~560789)	Cummins	QSB5.9-30TAA
	TR-300-4-00102	363-612-80001 (560790~)	Cummins	QSB5.9-30TAA
		363-612-80000 (~560789)	Cummins	QSB5.9-30TAA
GR-300EX-1	GR-300E-1-00201	363-612-80000	Cummins	QSB5.9-30TAA
	GR-300E-1-00202	363-612-80000	Cummins	QSB5.9-30TAA
TR-350XL-3	TR-350-3-00101	363-610-20000	Mitsubishi	6D16-TLEA
TR-400E	TR-400E-1-00101	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00102	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00103	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00104	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00105	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00106	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00115	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (540043~65)	Nissan	PD603
		363-600-50001 (~540042)	Nissan	PD603
	TR-400E-1-00125	363-600-50001 (540066~)	Nissan	PD603
		363-600-50000 (~540065)	Nissan	PD603
	TR-400E-1-00126	363-600-50001	Nissan	PD603
TR-400E-1-00127	363-602-90000	Mitsubishi	6D22	
TR-400E-1-00201	363-602-90000	Mitsubishi	6D22	
TR-400EX-2	TR-400E-2-00101	363-602-90000	Mitsubishi	6D22
	TR-400E-2-00102	363-602-90000	Mitsubishi	6D22
	TR-400E-2-00201	363-600-50001	Nissan	PD603
	TR-400E-2-00202	363-600-50001	Nissan	PD603

	TR-400E-2-01201	363-602-90000	Mitsubishi	6D22
	TR-400E-2-01202	363-602-90000	Mitsubishi	6D22
TR-400EX-3	TR-400E-3-00101	363-609-70000	Mitsubishi	6D16-TL
TR-450XL-2	TR-400E-2-00101	363-602-90000	Mitsubishi	6D22
	TR-400E-2-00102	363-602-90000	Mitsubishi	6D22
TR-450XL-4	GR-450-1-00101	363-611-50000	Mitsubishi	6D16-TLEE
	GR-450-1-00102	363-611-50000	Mitsubishi	6D16-TLEE
	GR-450-1-00103	363-611-50000	Mitsubishi	6D16-TLEE
TR-500EX-1	TR-500E-1-00125	363-600-50001 (545049~)	Nissan	PD603
		363-600-50000 (~545048)	Nissan	PD603
	TR-500E-1-00126	363-600-50001	Nissan	PD603
	TR-500E-1-00127	363-608-90000	Mitsubishi	6D22
TR-500EX-2	TR-500E-2-00101	363-602-90000	Mitsubishi	6D22
	TR-500E-2-00202	363-600-50001	Nissan	PD603
	TR-500E-2-01202	363-602-90000	Mitsubishi	6D22
	TR-500E-2-01204	363-608-90000	Mitsubishi	6D22
TR-500EX-3	TR-500E-3-00101	363-609-70000	Mitsubishi	6D16-TL
TR-500XL-3	TR-500-3-00101	363-609-70000	Mitsubishi	6D16-TL
TR-500XL-4	GR-500-1-00101	363-611-50000	Mitsubishi	6D16-TLEE
	GR-500-1-00211	363-613-20000	Mitsubishi	6M60-TLA3B
TR-600XL-2	TR-500E-2-00101	363-602-90000	Mitsubishi	6D22
TR-600XL-3	TR-600-3-00101	363-609-70000	Mitsubishi	6D16-TL
GR-600XL-1 (TR-600XL-4)	GR-600-1-00101	363-611-50000	Mitsubishi	6D16-TLEE
TR-600EXL-3	TR-600E-3-00101	363-611-40000	Mitsubishi	6D16-TUA
	TR-600E-3-00202	363-613-40000 (545986~)	Mitsubishi	6D16-TL
		363-609-70000 (~545985)	Mitsubishi	6D16-TL
	TR-600E-3-00211	363-609-70000	Mitsubishi	6D16-TL
GR-600XXL-1 (TR-600XXL-4)	GR-600-1-00103	363-611-50000	Mitsubishi	6D16-TLEE
	GR-600-1-00213	363-613-20000	Mitsubishi	6M60-TLA3B
TR-650EXL-3	TR-600E-3-00202	363-613-40000 (545986~)	Mitsubishi	6D16-TL
		363-609-70000 (~545985)	Mitsubishi	6D16-TL
	TR-600E-3-00211	363-609-70000	Mitsubishi	6D16-TL
TR-650XL-3	TR-650-3-00102	363-609-70000	Mitsubishi	6D16-TL

TR-650XXL-3	TR-650-3-00101	363-609-70000	Mitsubishi	6D16-TL
GR-700E-1	GR-700E-1-00101	363-611-50000	Mitsubishi	6D16-TLU2A
	GR-700E-1-00102	363-611-50000	Mitsubishi	6D16-TLU2A
	GR-700E-1-00211	363-613-20000	Mitsubishi	6M60-TLA3B
	GR-700E-1-00212	363-613-20000	Mitsubishi	6M60-TLA3B
GR-700EXL-1	GR-700E-1-00101	363-611-50000	Mitsubishi	6D16-TLU2A
	GR-700E-1-00102	363-611-50000	Mitsubishi	6D16-TLU2A
	GR-700E-1-00211	363-613-20000	Mitsubishi	6M60-TLU3B
	GR-700E-1-00212	363-613-20000	Mitsubishi	6M60-TLU3B
GR-800XXL-1 (TR-800XXL-4)	GR-800-1-00101	363-611-50000	Mitsubishi	6D16-TLU2A
	GR-800-1-00211	363-613-20000	Mitsubishi	6M60-TLA3B

TR-80EX-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-80E-1-00101												
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	1											
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1											
3	CARTRIDGE (Oil filter on return circuit, Inside of chassis frame)		*****												
4	FILTER (Line filter on return circuit, On relief valve)		343-400-21700	1											
5	FILTER (Line filter on winch circuit, On multiple control valve)		343-400-21700	3											
6	FILTER (Line filtr, On air reservoir of service brake)		343-400-21700	1											
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-429-25010	2											
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1											
2	BREATHER (Air breather, On transmission)		363-702-07610	1											
3	BREATHER (Air breather, On torque converter)		363-702-07610	1											
ENGINE ※1			Hino W04C-T												
1	ELEMENT (Air cleaner, On air inlet)		347-808-37510	1											
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1341	1											
3	CARTRIDGE (Oil filter, Side of engine)		15607-1480	1											

Remark
 ※1: The engine serial number should be informed us at placing an order.

TR-150XL-4

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-150-4-00101	TR-150-4-00102											
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	1	366-713-10050	1									
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1									
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		366-701-09511	1	366-701-09511	1									
4	ELEMENT (Line filter, On winch brake circuit)		366-719-75040	1	366-719-75040	1									
5	FILTER (Line filtr, On service brake air reservoir)		*****		*****										
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2									
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510	1	366-712-79510	1									
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1									
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1									
ENGINE ※1			Cummins QSB3.9-30TAA		Cummins QSB3.9-30TAA										
1	ELEMENT (Air cleaner, On air inlet)		347-820-27510	1	347-820-27510	1									
2	CARTRIDGE (Fuel filter, Side of engine)		FS19616	1	FS19616	1									
3	CARTRIDGE (Oil filter, Side of engine)		LF3806	1	LF3806	1									

Remarks

※1: The engine number should be informed us at placing an order.

TR-200E-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200E-1-00101	TR-200E-1-00103	TR-200E-1-00301	TR-200E-1-00302									
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		344-600-00010	1	344-600-00010	1	344-600-00010	1	344-600-00010	1					
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1					
3	FILTER (Oil filter on return circuit, On right side of swing frame)		366-702-05030	1	366-702-05030	1	366-702-05030	1	366-702-05030	1					
4	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1					
5	FILTER (Filter inside of hydraulic valve for boom telescoping circuit, On swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1					
6	FILTER (Line filter on winch brake circuit, On left side of swing frame)		366-218-65020	2	366-218-65020	2	366-218-65020	2	366-218-65020	2					
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2					
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		591-515-01030	1	591-515-01030	1	591-515-01030	1	591-515-01030	1					
2	BREATHER (Air breather, On transmission)		363-501-01030	1	363-501-15280	1	363-501-15280	1	363-501-15280	1					
3	BREATHER (Air breather, On torque converter)		346-720-05140	1	346-720-05140	1	346-720-05140	1	346-720-05140	1					
ENGINE ※1			Mitsubishi 6D15W		Mitsubishi 6D15W		Mitsubishi 6D15W		Mitsubishi 6D15W						
1	ELEMENT INNER (Air cleaner, On air inlet)		346-700-15040	1	346-700-15040	1	346-700-15040	1	346-700-15040	1					
	ELEMENT OUTER (Air cleaner, On air inlet)		344-202-67510	1	344-202-67510	1	344-202-67510	1	344-202-67510	1					
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1					
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1					
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1					

Remarks

※1: The engine number should be informed us at placing an order.

TR-200EX-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200E-2-00101	TR-200E-2-00102	TR-200E-2-00201										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1	366-700-30010	1							
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	336-600-07511	1							
3	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1							
4	FILTER (Line filter on accumulator circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1							
5	FILTER (Line filter on winch circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	3							
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1							
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
3	BREATHER (Air breather, On torque converter)		*****		*****		*****								
ENGINE ※1			Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T								
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1							
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1							
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1							
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1							

Remarks

※1: The engine number should be informed us at placing an order.

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200E-3-00101												
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-700-30010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)	336-600-07511	1												
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)	366-701-09511	1												
4	FILTER(Oil filter on outrigger circuit, Lower of center joint)	366-721-75010	1												
5	FILTER (Line filter for steering, On right side of swing frame)	*****													
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)	366-455-45010	2												
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Inside of chassis frame)	366-712-79510	1												
2	BREATHER (Air breather, On transmission)	363-702-07610	1												
3	BREATHER (Air breather, On torque converter)	363-702-07610	1												
ENGINE ※1		Mitsubishi 6D16-TUA													
1	ELEMENT (Air cleaner, On air inlet)	355-200-37520	1												
2	CARTRIDGE (Fuel filter, Side of engine)	ME015254	1												
3	CARTRIDGE (Oil filter, Side of engine)	ME130968	1												
4	ELEMENT (Water separator of fuel, Side of fuel tank)	*****													

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-230E-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-230E-1-01102	TR-230E-1-01112	TR-230E-1-01222	TR-230E-1-01401								
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		344-600-00010	1	344-600-00010	1	344-600-00010	1	344-600-00010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1				
3	CARTRIDGE (Oil filter on return circuit, Alongside of hydraulic oil tank)		*****		*****		*****		*****					
4	FILTER (Oil filter on return circuit, On right side of swing frame)		377-702-05030	1	377-702-05030	1	377-702-05030	1	377-702-05030	1				
5	FILTER (Oil filter on steering circuit, On left side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1				
6	FILTER (Filter on winch brake circuit, On left side of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2				
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		*****		*****		*****		*****					
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Forward of torque converter)		591-515-01030	1	591-515-01030	1	591-515-01030	1	591-515-01030	1				
2	BREATHER (Air breather, On transmission)		363-501-15280	1	363-501-15280	1	363-501-15280	1	363-501-15280	1				
3	BREATHER (Air breather, On torque converter)		346-720-05740	1	346-720-05740	1	*****		*****					
4	ELEMENT (Filter, Inside of pressure regulator valve on transmission)		*****		*****		*****		*****					
5	ELEMENT (Filter, Inside of lock up valve on transmission)		*****		*****		*****		*****					
ENGINE ※1			Nissan ND604		Nissan ND604		Nissan ND604		Nissan NE603					
1	ELEMENT INNER (Air cleaner, On air inlet)		346-700-15040	1	346-700-15040	1	346-700-15040	1	346-700-15040	1				
	ELEMENT OUTER (Air cleaner, On air inlet)		344-202-67510	1	344-202-67510	1	344-202-67510	1	344-202-67510	1				
2	CARTRIDGE / ELEMENT (Fuel filter, Side of engine)		16444-99129	1	16444-99129	1	16444-99129	1	16444-99128	1				
3	CARTRIDGE / ELEMENT (Oil filter,full-flow, Side of engine)		15274-90127	1	15274-90127	1	15274-90127	1	15274-99128	1				
	CARTRIDGE / ELEMENT (Oil filter,by-pass, Side of engine)		15274-99289	1	15274-99289	1	15274-99289	1	15274-99289	1				
4	ELEMENT (Fuel filter on fuel circuit, Option)		590-322-71010	1	590-322-71010	1	590-322-71010	1	590-322-71010	1				

Remarks

※1: The engine number should be informed us at placing an order.

TR-250E-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250E-1-00101	TR-250E-1-00201	TR-250E-1-00301	TR-250E-1-00302	TR-250E-1-00401							
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		344-600-00010	1	344-600-00010	1	344-600-00010	1	344-600-00010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1				
3	FILTER (Oil filter on return circuit, On right side of swing frame)		366-702-05030	1	366-702-05030	1	366-702-05030	1	366-702-05030	1				
4	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1				
5	FILTER (Line filter on steering circuit, Center of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
6	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1				
7	FILTER (Filter inside of check valve on winch brake circuit, On left side of swing frame)		366-404-65040	2	366-404-65040	2	366-404-65040	2	366-404-65040	2				
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-200-25040	2	366-200-25040	2	366-200-25040	2	366-200-25040	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		591-515-01030	1	591-515-01030	1	591-515-01030	1	591-515-01030	1				
2	BREATHER (Air breather, On transmission)		363-501-15280	1	363-501-15280	1	363-501-15280	1	363-501-15280	1				
3	BREATHER (Air breather, On torque converter)		346-720-05140	1	346-720-05140	1	346-720-05140	1	346-720-05140	1				
ENGINE ※1			Hino H06C		Hino H06C		Mitsubishi 6D15		Mitsubishi 6D15		Hino H06C			
1	ELEMENT INNER (Air cleaner, On air inlet)		334-202-67510	1	334-202-67510	1	346-700-15040	1	346-700-15040	1	334-202-67510	1		
	ELEMENT OUTER (Air cleaner, On air inlet)		334-202-67520	1	334-202-67520	1	344-202-67510	1	344-202-67510	1	334-202-67520	1		
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1290	1	23401-1290	1	ME015254	1	ME015254	1	23401-1290	1		
3	CARTRIDGE / ELEMENT (Oil filter, Side of engine)		15607-1320	1	15607-1320	1	ME034611	1	ME034611	1	15607-1320	1		
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1		

Remarks

※1: The engine number should be informed us at placing an order.

TR-250EX-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250E-2-00101	TR-250E-2-00102	TR-250E-2-00201	TR-250E-2-00301										
HYDRAULIC OIL CIRCUIT																
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1	366-700-30010	1	366-700-30010	1						
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	336-600-07511	1						
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		*****		*****		*****		*****							
4	FILTER (Filter, inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1						
5	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1						
6	FILTER (Line filter on accumulator circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1						
7	FILTER (Line filter on main winch circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	2	343-400-21700	1						
8	FILTER (Line filter on aux. winch circuit, On left side of swing frame)		343-400-21700	1	*****		343-400-21700	1	343-400-21700	1						
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2						
DRIVING POWER TRANSMISSION SYSTEM																
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1						
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1						
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****							
ENGINE ※1			Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T							
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1						
2	CARTRIDGE / ELEMENT (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1						
3	CARTRIDGE / ELEMENT (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1						
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1						

Remarks

※1: The engine number should be informed us at placing an order.

TR-250EX-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250E-3-00101	TR-250E-3-00102													
HYDRAULIC OIL CIRCUIT																	
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1											
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1											
3	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1											
4	FILTER (Line filter on winch circuit, On left side of swing frame)		343-400-21700	2	343-400-21700	2											
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2											
DRIVING POWER TRANSMISSION SYSTEM																	
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1											
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1											
3	BREATHER (Air breather, On torque converter)		*****		*****												
ENGINE ※1			Mitsubishi 6D16-TUA		Mitsubishi 6D16-TUA												
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1											
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1											
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1											
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1											

Remarks

※1: The engine number should be informed us at placing an order.

TR-280XL

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200E-2-00101	TR-200E-2-00102	TR-200E-2-00201												
HYDRAULIC OIL CIRCUIT																	
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1	366-700-30010	1									
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	336-600-07511	1									
3	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1									
4	FILTER (Line filter on accumulator circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1									
5	FILTER (Line filter on winch circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	3									
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2									
DRIVING POWER TRANSMISSION SYSTEM																	
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1									
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1									
3	BREATHER (Air breather, On torque converter)		*****		*****		*****										
ENGINE ※1			Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T										
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1									
2	CARTRIDGE / ELEMENT (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1									
3	CARTRIDGE / ELEMENT (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1									
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1									

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-300E-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-300E-1-00101	TR-300E-1-00102	TR-300E-1-00103	TR-300E-1-00104								
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		*****	*****	*****	*****								
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1				
3	CARTRIDGE (Oil filter on return circuit, Inside of chassis frame)		*****	*****	*****	*****								
4	FILTER (Oil filter on return circuit, On right side of swing frame)		366-702-05030	1	366-702-05030	1	366-702-05030	1	366-702-05030	1				
5	FILTER (Line filter on steering circuit, On right side of Swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1				
6	FILTER (Line filter on hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1				
7	FILTER (Line filter on winch clutch circuit, On left side of swing frame)		343-400-21700	1	*****	*****	*****							
8	ELEMENT (Line filter on winch brake circuit, On right side of swing frame)		366-404-65040	2	366-404-65040	2	366-404-65040	2	366-404-65040	2				
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-710-35010	1	366-710-35010	1	366-710-35010	1	366-710-35010	1				
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1				
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1				
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		363-500-36790	1	363-500-36790	1	363-500-36790	1	363-500-36790	1				
ENGINE ※1			Nissan PD603	Mitsubishi 6D22	Mitsubishi 6D22	Nissan PD603								
1	ELEMENT INNER (Air cleaner, On air inlet)		346-700-15040	1	30030-84200	1	30030-84200	1	346-700-15040	1				
	ELEMENT OUTER (Air cleaner, On air inlet)		344-202-67510	1	30030-84100	1	30030-84100	1	344-202-67510	1				
2	ELEMENT SET (Oil filter, Side of engine)		*****	ME054334	1	ME054334	1	*****						
3	ELEMENT/CARTRIDGE (Oil filter full-flow, Side of engine)		15274-99885	1	ME121788	1	ME121788	1	15274-99885	1				
4	ELEMENT/CARTRIDGE (Oil filter by-pass, Side of engine)		15274-99289	1	ME054238	1	ME054238	1	15274-99289	1				
5	CARTRIDGE (Fuel filter, Side of engine)		16444-99128	1	ME056670	1	ME056670	1	16444-99128	1				
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1				
7	ELEMENT (Fuel filter, Option)		590-322-71010	1	*****	*****	590-322-71010	1						

Remarks

※1: The engine number should be informed us at placing an order.

TR-300EX-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-300E-2-00101	TR-300E-2-00201	TR-300E-2-00202										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2							
2	BREATHER (Air breather, On hydraulic oil tank)		366-728-70000 (560482~)	1	336-600-07511	1	336-600-07511	1							
3	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1							
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1							
5	FILTER (Line filter on accumulator circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1							
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2							
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1							
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
3	BREATHER (Air breather, On torque converter)		*****		*****		*****								
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		363-500-36791	1	*****		*****								
ENGINE ※1			Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T								
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1	347-804-37540	1							
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1							
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1							
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1							

Remarks

※1: The engine number should be informed us at placing an order.

TR-300EX-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-300E-3-00101	TR-300E-3-00102														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2												
2	BREATHER (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
4	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700	1	343-400-21700	1												
5	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1												
6	ELEMENT (Line filter on winch circuit, On hydraulic valve)		343-400-21700	2	343-400-21700	2												
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****													
ENGINE ※1			Mitsubishi 6D16-TUA		Mitsubishi 6D16-TUA													
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1												
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1												
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1												
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												

Remarks

※1: The engine number should be informed us at placing an order.

TR-300XL

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250E-2-00101	TR-250E-2-00102														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1												
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		*****		*****													
4	FILTER (Filter, inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1												
5	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1												
6	FILTER (Line filter on accumulator circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1												
7	FILTER (Line filter on main winch circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1												
8	FILTER (Line filter on aux. winch circuit, On left side of swing frame)		343-400-21700	1	*****													
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
ENGINE ※1			Mitsubishi 6D14-T		Mitsubishi 6D14-T													
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1												
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1												
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1												
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-300XL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-300-3-00101	TR-300-3-00102													
HYDRAULIC OIL CIRCUIT																	
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2											
2	BREATHER (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1											
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		*****		*****												
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1											
5	FILTER (Line filter on steering circuit, Center of swing frame)		366-725-30000	1	366-725-30000	1											
6	ELEMENT (Line filter on winch brake circuit, Inside of sequence valve)		366-037-65010	1	366-037-65010	1											
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2											
DRIVING POWER TRANSMISSION SYSTEM																	
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1											
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1											
3	BREATHER (Air breather, On torque converter)		*****		*****												
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	363-504-65380	1											
ENGINE ※1			Mitsubishi 6D16-TLEA		Mitsubishi 6D16-TLEA												
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1											
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1											
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1											
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1											

Remarks

※1: The engine number should be informed us at placing an order.

TR-300XL-4

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-300-4-00101	TR-300-4-00102											
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2									
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1									
3	CARTRIDGE (Oil filter of return circuit, Front of hydraulic tank)		366-701-09511	1	366-701-09511	1									
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1									
5	FILTER (Line filter on steering circuit, On center of swing frame)		366-725-30000	1	366-725-30000	1									
6	FILTER (Line filter on steering circuit, Lower of chassis frame)		366-726-30000	1	366-726-30000	1									
7	FILTER (Line filter on steering/axle lock circuit, On left side of swing frame)		366-726-30000	1	366-726-30000	1									
8	ELEMENT (Line filter on winch brake circuit, On right side of swing frame)		366-726-30000	2	366-726-30000	2									
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2									
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1									
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1									
3	BREATHER (Air breather, On torque converter)		*****		*****										
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****										
ENGINE ※1			Cummins QSB5.9-30TAA		Cummins QSB5.9-30TAA										
1	ELEMENT (Air cleaner, On air inlet)		347-820-27510	1	347-820-27510	1									
2	CARTRIDGE (Fuel filter, Side of engine)		FS19616	1	FS19616	1									
3	CARTRIDGE (Oil filter, Side of engine)		LF3806	1	LF3806	1									
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****										

Remarks

※1: The engine number should be informed us at placing an order.

GR-300EX-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-300E-1-00201	GR-300E-1-00202						
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1				
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1				
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1				
5	ELEMENT (Line filter, On winch brake circuit)		366-726-30000	2	366-726-30000	2				
6	FILTER (Line filter on steering circuit, On flow control valve)		366-725-30000	1	366-725-30000	1				
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of transmission)		366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1				
3	BREATHER (Air breather, On torque converter)		*****		*****					
4	ELEMENT (Filter, Inside of transmission)		*****		*****					
ENGINE ※1			Cummins QSB5.9-30TAA		Cummins QSB5.9-30TAA					
1	ELEMENT (Air cleaner, On air inlet)		347-820-27510	1	347-820-27510	1				
2	CARTRIDGE (Fuel filter, Side of engine)		FS19616	1	FS19616	1				
3	CATRIDGE (Oil filter, Side of engine)		LF3806	1	LF3806	1				
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****					

Remarks

※1 : The engine number should be informed us at placing an order.

TR-350XL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350-3-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-713-10050	2															
2	ELEMENT (Air breather, On hydraulic oil tank)	336-600-07511	1															
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic tank)	*****																
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)	366-726-15010	1															
5	FILTER (Oil filter on return circuit, On right side of swing frame)	*****																
6	FILTER (Line filter on steering circuit, On right side of swing frame)	366-725-30000	1															
7	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)	*****																
8	ELEMENT (Line filter on winch brake circuit, On right side of swing frame)	366-037-65010	1															
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)	366-455-45010	2															
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Lower of chassis frame)	366-712-79510	1															
2	BREATHER (Air breather, On transmission)	363-700-55710	1															
3	BREATHER (Air breather, On torque converter)	*****																
4	ELEMENT (Element filter, Inside of transmission)	363-504-65380	1															
ENGINE ※1		Mitsubishi 6D16-TLEA																
1	ELEMENT (Air cleaner, On air inlet)	355-200-37520	1															
2	CARTRIDGE (Fuel filter, Side of engine)	ME015254	1															
3	CARTRIDGE (Oil filter, Side of engine)	ME130968	1															
4	ELEMENT (Water separator of fuel, Side of fuel tank)	348-801-77540	1															
5	ELEMENT (Fuel filter, Option)	*****																

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-400E (NO.1)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-400E-1-00101	TR-400E-1-00102	TR-400E-1-00103	TR-400E-1-00104	TR-400E-1-00105	TR-400E-1-00106	TR-400E-1-00115	TR-400E-1-00125			
HYDRAULIC OIL CIRCUIT													
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010 (540024~)	1	366-707-50010 (540024~)	1	366-707-50010 (540024~)	1	366-707-50010 (540024~)	1	366-707-50010 (540024~)	1	
			366-700-30010 (~540023)	2	366-700-30010 (~540023)	2	366-700-30010 (~540023)	2	366-700-30010 (~540023)	2	366-700-30010 (~540023)	2	
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1	
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****		*****		*****		*****		*****	343-400-21700	1
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	
7	ELEMENT (Line filter, Inside of solenoid valve on automatic stop circuit)		366-200-25040	2	366-200-25040	2	366-200-25040	2	366-200-25040	2	366-200-25040	2	
DRIVING POWER TRANSMISSION SYSTEM													
1	ELEMENT (Oil filter, Lower of chassis frame)		366-710-35010 (540025~)	1	366-710-35010 (540025~)	1	366-710-35010 (540025~)	1	366-710-35010 (540025~)	1	366-710-35010 (540025~)	1	
			591-515-01030 (~540024)	1	591-515-01030 (~540024)	1	591-515-01030 (~540024)	1	591-515-01030 (~540024)	1	591-515-01030 (~540024)	1	
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****		*****		*****		*****	*****	
ENGINE ※1			Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603		
1	ELEMENT SET (Air cleaner, On air inlet)		16546-96029	1	16546-96029	1	16546-96029	1	16546-96029	1	16546-96029	1	
	ELEMENT INNER (Air cleaner, On air inlet)		16546-99409	1	16546-99409	1	16546-99409	1	16546-99409	1	16546-99409	1	
	ELEMENT OUTER (Air cleaner, On air inlet)		16546-99509	1	16546-99509	1	16546-99509	1	16546-99509	1	16546-99509	1	
2	ELEMENT/CARTRIDGE (Oil filter, full-flow, Side of engine)		15274-99885	1	15274-99885	1	15274-99885	1	15274-99885	1	15274-99885	1	
	ELEMENT/CARTRIDGE (Oil filter, by-pass, Side of engine)		15274-99289	1	15274-99289	1	15274-99289	1	15274-99289	1	15274-99289	1	
3	ELEMENT/CARTRIDGE (Fuel filter, Side of engine)		16444-99128	1	16444-99128	1	16444-99128	1	16444-99128	1	16444-99128	1	
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****		*****	*****	
5	ELEMENT KIT (Fuel filter, Option)		590-322-71010	1	590-322-71010	1	590-322-71010	1	590-322-71010	1	590-322-71010	1	

Remarks

※1: The engine number should be informed us at placing an order.

TR-400E (NO.2)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-400E-1-00126	TR-400E-1-00127	TR-400E-1-00201										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1							
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1							
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1							
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1							
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		343-400-21700	1	*****		343-400-21700	1							
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-517-15300	2	366-517-15300	2	366-517-15300	2							
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		*****		366-517-15300	2	366-517-15300	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-710-35010	1	366-710-35010	1	366-710-35010	1							
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****		*****								
ENGINE ※1			Nissan PD603		Mitsubishi 6D22		Mitsubishi 6D22								
1	ELEMENT SET (Air cleaner, On air inlet)		16546-96029	1	*****		*****								
	ELEMENT INNER (Air cleaner, On air inlet)		16546-99409	1	3003084200	1	3003084200	1							
	ELEMENT OUTER (Air cleaner, On air inlet)		16546-99509	1	3003084100	1	3003084100	1							
2	ELEMENT/CARTRIDGE (Oil filter, full-flow, Side of engine)		15274-99885	1	*****		*****								
	ELEMENT/CARTRIDGE (Oil filter, by-pass, Side of engine)		15274-99289	1	*****		*****								
3	ELEMENT/CARTRIDGE (Fuel filter, Side of engine)		16444-99128	1	ME056670	1	ME056670	1							
4	ELEMENT/CARTRIDGE (Oil filter, Side of engine)		*****	1	ME121789	1	ME121789	1							
5	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		348-801-77540	1	348-801-77540	1							
6	ELEMENT KIT (Fuel filter, Option)		590-322-71010	1	*****		*****								

Remarks

※1: The engine number should be informed us at placing an order.

TR-400EX-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-400E-2-00101	TR-400E-2-00102	TR-400E-2-00201	TR-400E-2-00202	TR-400E-2-01201	TR-400E-2-01202						
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1		
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07520	1	336-600-07520	1		
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1		
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1		
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****		*****		*****	343-400-21700	1	*****		343-400-21700	1	
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2		
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2		
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-710-35010	1	366-710-35010	1	366-710-35010	1	366-710-35010	1	366-710-35010	1		
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1		
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1		
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****		*****	*****	*****	*****	*****	*****		
ENGINE ※1			Mitsubishi 6D22		Mitsubishi 6D22		Nissan PD603		Nissan PD603		Mitsubishi 6D22		Mitsubishi 6D22	
1	ELEMENT SET (Air cleaner, On air inlet)		*****		*****		16546-96029	1	16546-96029	1	*****		*****	
	ELEMENT INNER (Air cleaner, On air inlet)		3003084200	1	3003084200	1	16546-99409	1	16546-99409	1	3003084200	1	3003084200	1
	ELEMENT OUTER (Air cleaner, On air inlet)		3003084100	1	3003084100	1	16546-99509	1	16546-99509	1	3003084100	1	3003084100	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME056670	1	ME056670	1	16444-99128	1	16444-99128	1	ME056670	1	ME056670	1
3	CARTRIDGE (Oil filter, Side of engine)		ME121789	1	ME121789	1	*****		*****		ME121789	1	ME121789	1
4	CARTRIDGE/ELEMENT (Oil filter, full-flow, Side of engine)		*****		*****		15274-99885	1	15274-99885	1	*****		*****	
	CARTRIDGE/ELEMENT (Oil filter, by-pass, Side of engine)		*****		*****		15274-99289	1	15274-99289	1	*****		*****	
5	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1

Remarks

※1: The engine number should be informed us at placing an order.

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-400E-3-00101												
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1											
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1											
3	FILTER (Line filter on steering circuit, On right side of swing frame)		366-725-30000	1											
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		*****												
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****												
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-037-65010	1											
7	ELEMENT (Line filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2											
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1											
2	BREATHER (Air breather, On transmission)		363-700-55710	1											
3	BREATHER (Air breather, On torque converter)		*****												
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1											
ENGINE ※1			Mitsubishi 6D16-TL												
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1											
2	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1											
3	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1											
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1											
5	ELEMENT KIT (Fuel filter,Option)		*****												

Remarks

※1: The engine number should be informed us at placing an order.

TR-450XL-4

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-450-1-00101	GR-450-1-00102	GR-450-1-00103					
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1		
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1		
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1		
4	ELEMENT (Oil filter on outrigger circuit, Lower on center joint)		366-726-15010	1	366-726-15010	1	366-726-15010	1		
5	FILTER (Line filter on steering circuit, On flow-control valve)		366-726-30000	1	366-726-30000	1	366-726-30000	1		
6	ELEMENT (Line filter, On main and aux. winch circuit)		366-726-30000	2	366-726-30000	1	366-726-30000	1		
7	ELEMENT (Line filter, On 3rd winch circuit)		*****		*****		*****			
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2		
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of engine)		366-712-79510	1	366-712-75070	1	366-712-75070	1		
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1		
3	BREATHER (Air breather, On torque converter)		*****		*****		*****			
4	ELEMENT (Line filter, Inside of transmission)		363-504-65380	1	363-504-65380	1	363-504-65380	1		
ENGINE ※1			Mitsubishi 6D16-TLEE		Mitsubishi 6D16-TLEE		Mitsubishi 6D16-TLEE			
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1	355-200-37520	1		
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1		
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1		
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1		

Remarks

※1 : The engine number should be informed us at placing an order.

TR-500EX-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500E-1-00125	TR-500E-1-00126	TR-500E-1-00127										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-700-30010 (~545025)	2	366-707-50010	1							
					366-707-50010 (545026~)	1									
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1							
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1							
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1							
5	FILTER (Line filter on winch circuit, On relief valve at right side of swing frame)		343-400-21700	1	343-400-21700	1	*****								
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-517-15300	1	366-517-15300	1	366-517-15300	1							
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-429-25010	2	366-517-15300	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		591-515-01030 (~545023)	1	366-710-35010	1	366-710-35010	1							
			366-710-35010 (545024~)	1											
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****		*****								
ENGINE ※1			Nissan PD603		Nissan PD603		Mitsubishi 6D22								
1	ELEMENT INNER (Air cleaner, On air inlet)		16546-99409	1	16546-99409	1	3003084200	1							
2	ELEMENT OUTER (Air cleaner, On air inlet)		16546-99509	1	16546-99509	1	3003084100	1							
3	CARTRIDGE (Fuel filter, Side of engine)		*****		*****		ME056670	1							
4	ELEMENT/CARTRIDGE (Oil filter main & by-pass, Side of engine)		15274-99885	1	15274-99885	1	ME121789	1							
	ELEMENT/CARTRIDGE (Oil filter main & by-pass, Side of engine)		15274-99289	1	15274-99289	1	*****								
5	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		348-801-77540	1							
6	ELEMENT KIT (Fuel filter,Option)		590-322-71010	1	590-322-71010	1	*****								

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-500EX-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500E-2-00101	TR-500E-2-00202	TR-500E-2-01202	TR-500E-2-01204									
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1					
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1					
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1	190-451-08030	1					
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1					
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****		343-400-21700	1	343-400-21700	1	343-400-21700	1					
6	ELEMENT (Line filter for winch brake circuit, On left side of swing frame)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2					
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2					
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Lower of chassis frame)		366-710-35010	1	366-710-35010	1	366-710-35010	1	366-710-35010	1					
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1					
3	BREATHER (Air breather, On torque converter)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1					
4	ELEMENT (Element filter, Inside of reducing valve on transmission)		*****		*****		*****		*****						
ENGINE ※1			Mitsubishi 6D22		Nissan PD603		Mitsubishi 6D22		Mitsubishi 6D22						
1	ELEMENT INNER (Air cleaner, On air inlet)		3003084200	1	16546-96029	1	3003084200	1	334-202-67510	1					
2	ELEMENT OUTER (Air cleaner, On air inlet)		3003084100	1	16546-99509	1	3003084100	1	334-202-67520	1					
3	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME056670	1	16444-99128	1	ME056670	1	ME056670	1					
4	ELEMENT/CARTRIDGE (Oil filter, Side of engine)		ME121789	1	*****		ME121789	1	ME121789	1					
5	ELEMENT/CARTRIDGE (Oil filter,full-flow, Side of engine)		*****		15274-99885	1	*****		*****						
	ELEMENT/CARTRIDGE (Oil filter,by-pass, Side of engine)		*****		15274-99289	1	*****		*****						
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	*****		348-801-77540	1	348-801-77540	1					
7	ELEMENT KIT (Fuel filter,Option)		*****		590-322-71010	1	*****		*****						

Remarks

※1: The engine number should be informed us at placing an order.

TR-500EX-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500E-3-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	FILTER (Line filter on steering circuit, On right side of swing frame)		366-725-30000	1														
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		*****															
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****															
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-037-65010	1														
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1														
2	BREATHER (Air breather, On transmission)		363-700-55710	1														
3	BREATHER (Air breather, On torque converter)		*****															
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1														
ENGINE ※1			Mitsubishi 6D16-TL															
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1														
2	ELEMENT INNER (Air cleaner, On air inlet)		*****															
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****															
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1														
5	ELEMENT/CARTRIDGE (Oil filter, Side of engine)		ME130968	1														
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1														
7	ELEMENT KIT (Fuel filter, Option)		*****															

Remarks

※1: The engine number should be informed us at placing an order.

TR-500XL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500-3-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	FILTER (Line filter on steering circuit, On right side of swing frame)		366-725-30000	1														
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		*****															
5	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****															
6	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-037-65010	1														
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1														
2	BREATHER (Air breather, On transmission)		363-700-55710	1														
3	BREATHER (Air breather, On torque converter)		*****															
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1														
ENGINE ※1			Mitsubishi 6D16-TL															
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1														
2	ELEMENT INNER (Air cleaner, On air inlet)		*****															
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****															
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1														
5	ELEMENT/CARTRIDGE (Oil filter, Side of engine)		ME130968	1														
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1														
7	ELEMENT KIT (Fuel filter, Option)		*****															

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-500XL-4

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-500-1-00101	GR-500-1-00211														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
3	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1												
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1												
5	FILTER (Line filter on steering circuit, On right side of swing frame)		366-725-30000	1	366-725-30000	1												
6	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		*****		*****													
7	FILTER (Line filter on winch clutch circuit, On right side of swing frame)		*****		*****													
8	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		366-726-30000	2	366-726-30000	2												
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	363-504-65380	1												
ENGINE ※1			Mitsubishi 6D16-TLEE		Mitsubishi 6M60-TLA3B													
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	ME063135	1												
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****													
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****													
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1	ME131824	1												
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1	ME130968	1												
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												
7	ELEMENT KIT (Fuel filter,Option)		*****		*****													

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-600XL-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500E-2-00101											
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1										
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1										
3	FILTER (Oil filter on steering circuit, On right side of swing frame)		190-451-08030	1										
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On left side of swing frame)		366-402-75040	1										
6	ELEMENT (Filter inside of check valve on winch circuit, On main hydraulic oil motor)		366-517-15300	2										
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2										
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Front of transmission)		366-710-35010	1										
2	BREATHER (Air breather, On transmission)		363-700-55710	1										
3	BREATHER (Air breather, On torque converter)		363-700-55710	1										
4	ELEMENT (Element filter, Inside of transmission)		*****											
ENGINE ※1			Mitsubishi 6D22											
1	ELEMENT (Air cleaner, On air inlet)		*****											
2	ELEMENT INNER (Air cleaner, On air inlet)		3003084200	1										
3	ELEMENT OUTER (Air cleaner, On air inlet)		3003084100	1										
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME056670	1										
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME121789	1										
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1										
7	ELEMENT KIT (Fuel filter,Option)		*****											

Remarks

※1: The engine number should be informed us at placing an order.

TR-600XL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-600-3-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	FILTER (Line filter on steering circuit, On left side of swing frame)		366-725-30000	1														
4	FILTER (Filter inside of sequence valve on winch brake circuit)		366-037-65010	1														
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1														
2	BREATHER (Air breather, On transmission)		363-700-55710	1														
3	BREATHER (Air breather, On torque converter)		*****															
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1														
ENGINE ※1			Mitsubishi 6D16-TL															
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1														
2	ELEMENT INNER (Air cleaner, On air inlet)		*****															
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****															
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1														
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1														
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1														
7	ELEMENT KIT (Fuel filter,Option)		*****															

Remarks
 ※1: The engine number should be informed us at placing an order.

GR-600XXL-1 (TR-600XXL-4) Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-600-1-00103	GR-600-1-00213														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
3	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1												
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1												
5	FILTER (Line filter for steering circuit, On flow-control valve)		366-725-30000	1	366-725-30000	3												
6	FILTER (Filter inside of sequence valve on winch brake circuit,)		366-037-65010	1	366-037-65010	1												
7	ELEMENT (line filter on return circuit, On right side of swing frame)		366-719-75040	1	366-719-75040	1												
8	FILTER (Line filter on steering/axle lock circuit, On right side of swing frame)		366-726-30000	1	366-726-30000	1												
9	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)		366-455-45010	2	366-455-45010	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-702-07610	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	*****													
ENGINE ※1			Mitsubishi 6D16-TLEE		Mitsubishi 6M60-TLA3B													
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	ME063135	1												
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****													
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****													
4	ELEMENT/CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME131824	1												
5	ELEMENT/CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1												
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												
7	ELEMENT KIT (Fuel filter,Option)		*****		*****													

Remarks

※1: The engine number should be informed us at placing an order.

TR-600EXL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-600E-3-00101	TR-600E-3-00202	TR-600E-3-00211										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1							
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1							
3	FILTER (Line filter for steering circuit, On right side of swing frame)		366-725-30000	1	366-725-30000	1	366-725-30000	1							
4	ELEMENT (Filter inside of sequence valve on winch circuit)		366-037-65010	1	366-037-65010	1	366-037-65010	1							
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1	366-712-79510	1	366-712-79510	1							
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1							
3	BREATHER (Air breather, On torque converter)		*****		*****		*****								
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	363-504-65380	1	363-504-65380	1							
ENGINE ※1			Mitsubishi 6D16-TL		Mitsubishi 6D16-TL		Mitsubishi 6D16-TL								
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1	347-804-37540	1							
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****		*****								
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****		*****								
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME035393	1	ME035393	1	ME035393	1							
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME074013	1	ME074013	1	ME074013	1							
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1							
7	ELEMENT KIT (Fuel filter,Option)		*****		*****		*****								

Remarks

※1: The engine number should be informed us at placing an order.

TR-650XL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-650-3-00102															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	FILTER (Line filter on steering circuit, On flow control valve)		366-725-30000	1														
4	FILTER (Filter inside of sequence valve on winch brake circuit)		366-037-65010	1														
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1														
2	BREATHER (Air breather, On transmission)		363-700-55710	1														
3	BREATHER (Air breather, On torque converter)		*****															
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1														
ENGINE ※1			Mitsubishi 6D16-TL															
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1														
2	ELEMENT INNER (Air cleaner, On air inlet)		*****															
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****															
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1														
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1														
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1														
7	ELEMENT KIT (Fuel filter,Option)		*****															

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-650XXL-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-650-3-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	FILTER (Line filter on steering circuit, On flow control valve)		366-725-30000	1														
4	FILTER (Filter inside of sequence valve on winch brake circuit)		366-037-65010	1														
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1														
2	BREATHER (Air breather, On transmission)		363-700-55710	1														
3	BREATHER (Air breather, On torque converter)		*****															
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1														
ENGINE ※1			Mitsubishi 6D16-TL															
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1														
2	ELEMENT INNER (Air cleaner, On air inlet)		*****															
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****															
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1														
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1														
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1														
7	ELEMENT KIT (Fuel filter,Option)		*****															

Remarks
 ※1: The engine number should be informed us at placing an order.

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-600E-3-00202	TR-600E-3-00211														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
3	FILTER (Line filter for steering circuit, On right side of swing frame)		366-725-30000	1	366-725-30000	1												
4	ELEMENT (Filter inside of sequence valve on winch circuit)		366-037-65010	1	366-037-65010	1												
5	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)		366-455-45010	2	366-455-45010	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	363-504-65380	1												
ENGINE ※1			Mitsubishi 6D16-TL		Mitsubishi 6D16-TL													
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1												
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****													
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****													
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1	ME015254	1												
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1	ME130968	1												
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												
7	ELEMENT KIT (Fuel filter,Option)		*****		*****													

Remarks
 ※1: The engine number should be informed us at placing an order.

GR-700E-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-700E-1-00101	GR-700E-1-00102	GR-700E-1-00211	GR-700E-1-00212				
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1
4	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1	366-726-15010	1	366-726-15010	1
5	ELEMENT (Line filter, On winch circuit)		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
6	ELEMENT (Line filter, On 3rd winch circuit)		*****		*****		*****		*****	
7	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of engine)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-702-07610	1	363-702-07610	1
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****	
4	ELEMENT (Line filter, Inside of transmission)		363-504-65380	1	363-504-65380	1	*****		*****	
ENGINE ※1			Mitsubishi 6D16-TLU2A		Mitsubishi 6D16-TLU2A		Mitsubishi 6M60-TLU3B		Mitsubishi 6M60-TLU3B	
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1	ME442325	1	ME442325	1
2	CARTRIDGE (Fuel filter, Alongside of engine)		ME015254	1	ME015254	1	ME131824	1	ME131824	1
3	CARTRIDGE (Oil filter, Alongside of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1
4	ELEMENT (Water separator of fuel, Alongside of engine)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1

Remarks

※1 : The engine number should be informed us at placing an order.

GR-700EXL-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-700E-1-00101	GR-700E-1-00102	GR-700E-1-00211	GR-700E-1-00212				
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1
4	ELEMENT (Oil filter on P4 hydraulic pump circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1	366-726-15010	1	366-726-15010	1
5	ELEMENT (Line filter, On winch brake circuit)		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
6	FILTER (Line filter on steering circuit, On flow-control valve)		366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1
7	FILTER (Line filter on steering mode select circuit)		366-724-60000	1	366-724-60000	1	366-724-60000	1	366-724-60000	1
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front right of transmission)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-702-07610	1	363-702-07610	1
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****	
4	ELEMENT (Line filter, Inside of transmission)		363-504-65380	1	363-504-65380	1	*****		*****	
ENGINE ※1			Mitsubishi 6D16-TLU2A		Mitsubishi 6D16-TLU2A		Mitsubishi 6M60-TLU3B		Mitsubishi 6M60-TLU3B	
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1	ME442325	1	ME442325	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME131824	1	ME131824	1
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1

Remarks

※1 : The engine number should be informed us at placing an order.

GR-800XXL-1 (TR-800XXL-4) Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-800-1-00101	GR-800-1-00211														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
3	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1												
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1												
5	FILTER (Line filter on steering circuit, On flow-control valve)		366-725-30000	1	366-725-30000	1												
6	FILTER (Filter inside of sequence valve on winch brake circuit)		366-037-65010	1	366-037-65010	1												
7	ELEMENT (Line filter on return circuit, On right side of swing frame)		366-719-75040	1	366-719-75040	1												
8	FILTER (Line filter on steering/axle lock circuit, On right side of swing frame)		366-726-30000	1	366-726-30000	1												
6	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)		366-455-45010	2	366-455-45010	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of transmission)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-702-07610	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Element filter, Inside of transmission)		363-504-65380	1	*****													
ENGINE ※1			Mitsubishi 6D16-TLU2A		Mitsubishi 6M60-TLA3B													
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	ME063135	1												
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****													
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****													
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME015254	1	ME131824	1												
5	CARTRIDGE/ELEMENT (Oil filter, Side of engine)		ME130968	1	ME130968	1												
6	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1												
7	ELEMENT KIT (Fuel filter,Option)		*****		*****													

Remarks
 ※1: The engine number should be informed us at placing an order.

SPECIFICATION LIST OF ROUGH TERRAIN CRANE (DOMESTIC MODEL)

Crane Model	Spec. No.	Engine		
		Ass'y P/No.	Maker	Model
TR-80M-1 TR-80ML-1	TR-80M-1-00101	363-607-00001	Hino	W04C-T
	TR-80M-1-00102	363-607-00001	Hino	W04C-T
	TR-80M-1-00103	363-607-00001	Hino	W04C-T
	TR-80M-1-00104	363-607-00001	Hino	W04C-T
	TR-80M-1-00105	363-607-00001	Hino	W04C-T
	TR-80M-1-00106	363-607-00001	Hino	W04C-T
TR-100M-1 TR-100ML-1	TR-100M-1-00101	363-609-10000	Hino	W04D-T
	TR-100M-1-00102	363-609-10000	Hino	W04D-T
	TR-100M-1-00103	363-609-10000	Hino	W04D-T
	TR-100M-1-00104	363-609-10000	Hino	W04D-T
	TR-100M-1-00105	363-609-10000	Hino	W04D-T
	TR-100M-1-00106	363-609-10000	Hino	W04D-T
	TR-100M-1-00107	363-609-10000	Hino	W04D-T
	TR-100M-1-00108	363-609-10000	Hino	W04D-T
GR-100N-1	GR-100N-1-00105	363-611-20000	Mitsubishi	4M50-TL
GR-120N-1 GR-120NL-1	GR-120N-1-00101	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00102	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00103	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00104	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00105	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00106	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00107	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00108	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00111	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00112	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00113	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00114	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00115	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00116	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00117	363-611-20000	Mitsubishi	4M50-TL
	GR-120N-1-00118	363-611-20000	Mitsubishi	4M50-TL
GR-120F-1	GR-120F-1-00101	363-611-20000	Mitsubishi	4M50-TL
TR-160M-1	TR-160M-1-00101	363-600-10001	Mitsubishi	6D15W
		363-600-10000	Mitsubishi	6D15W
	TR-160M-1-00104	363-600-10001	Mitsubishi	6D15W
	TR-160M-1-00202	363-602-50001	Mitsubishi	6D15W
TR-160M-2	TR-160M-2-00101	363-605-60001	Mitsubishi	6D31
	TR-160M-2-00102	363-605-60001	Mitsubishi	6D31
	TR-160M-2-00103	363-605-60001	Mitsubishi	6D31

	TR-160M-2-00201	363-609-90000	Mitsubishi	6D34-TE1
TR-160M-3	TR-160M-3-00101	363-610-10000	Hino	H07C-TF
	TR-160M-3-00103	363-610-10000	Hino	H07C-TF
GR-160N-1	GR-160N-1-00101	363-612-60001 (525924~)	Cummins	QSB5.9-2A
		363-612-60000 (~525923)	Cummins	QSB5.9-2A
	GR-160N-1-00102	363-612-60001 (525924~)	Cummins	QSB5.9-2A
		363-612-60000 (~525923)	Cummins	QSB5.9-2A
	GR-160N-1-00103	363-612-60001	Cummins	QSB5.9-2A
TR-200M-3	TR-200M-3-00103	363-601-90000	Hino	H06C
	TR-200M-3-00105	363-601-90000	Hino	H06C
TR-200M-4	TR-200M-4-00101	363-604-90000	Mitsubishi	6D14-T
	TR-200M-4-00102	363-604-90000	Mitsubishi	6D14-T
	TR-200M-4-00103	363-604-90000	Mitsubishi	6D14-T
	TR-200M-4-00104	363-604-90000	Mitsubishi	6D14-T
	TR-200M-4-00105	363-604-90000	Mitsubishi	6D14-T
		363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00106	363-604-90000	Mitsubishi	6D14-T
		363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00107	363-604-90000	Mitsubishi	6D14-T
		363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00108	363-604-90000	Mitsubishi	6D14-T
		363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00109	363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00110	363-607-20000	Mitsubishi	6D14-T
	TR-200M-4-00111	363-607-20000	Mitsubishi	6D14-T
TR-200M-4-00112	363-607-20000	Mitsubishi	6D14-T	
TR-200M-5	TR-200M-5-00101	363-610-60000	Hino	H07C-TF
	TR-200M-5-00103	363-610-60000	Hino	H07C-TF
	TR-200M-5-00201	363-610-60000	Hino	H07C-TF
TR-250M-3	TR-250M-3-00101	363-600-70000	Nissan	PD603
	TR-250M-3-00102	363-600-70000	Nissan	PD603
	TR-250M-3-00103	363-600-70000	Nissan	PD603
	TR-250M-3-00121	363-600-70000	Nissan	PD603
	TR-250M-3-00122	363-600-70001	Nissan	PD603
TR-250M-4	TR-250M-4-00101	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00102	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00103	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00104	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00105	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00106	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00107	363-603-50001	Mitsubishi	6D16-T

	TR-250M-4-00108	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00109	363-603-50001	Mitsubishi	6D16-T
	TR-250M-4-00110	363-603-50001	Mitsubishi	6D16-T
TR-250M-5	TR-250M-5-00101	363-605-90000	Mitsubishi	6D16-T
	TR-250M-5-00102	363-605-90000	Mitsubishi	6D16-T
	TR-250M-5-00103	363-605-90000	Mitsubishi	6D16-T
	TR-250M-5-00104	363-605-90001 (FB0756~)	Mitsubishi	6D16-T
		363-605-90000 (~FB0755)	Mitsubishi	6D16-T
	TR-250M-5-00105	363-605-90001 (FB0756~)	Mitsubishi	6D16-T
		363-605-90000 (~FB0755)	Mitsubishi	6D16-T
	TR-250M-5-00106	363-605-90001 (FB0756~)	Mitsubishi	6D16-T
		363-605-90000 (~FB0755)	Mitsubishi	6D16-T
	TR-250M-5-00107	363-605-90001 (FB0756~)	Mitsubishi	6D16-T
363-605-90000 (~FB0755)		Mitsubishi	6D16-T	
TR-250M-5-00108	363-605-90001 (FB0756~)	Mitsubishi	6D16-T	
	363-605-90000 (~FB0755)	Mitsubishi	6D16-T	
TR-250M-6	TR-250M-6-00101	363-609-50000	Mitsubishi	6D16-TL
	TR-250M-6-00102	363-609-50000	Mitsubishi	6D16-TL
	TR-250M-6-00103	363-609-50000	Mitsubishi	6D16-TL
	TR-250M-6-00104	363-609-50000	Mitsubishi	6D16-TL
	TR-250M-6-00106	363-609-50000	Mitsubishi	6D16-TL
	TR-250M-6-00107	363-609-50000	Mitsubishi	6D16-TL
TR-250M-7	TR-250M-7-00101	363-611-10000	Mitsubishi	6M60-TLE2A
	TR-250M-7-00102	363-611-10000	Mitsubishi	6M60-TLE2A
	TR-250M-7-00103	363-611-10000	Mitsubishi	6M60-TLE2A
	TR-250M-7-00104	363-611-10000	Mitsubishi	6M60-TLE2A
GR-250N-1	GR-250N-1-00101	363-612-10000	Mitsubishi	6M60-TLE2A
	GR-250N-1-00102	363-612-10000	Mitsubishi	6M60-TLE2A
	GR-250N-1-00103	363-612-10000	Mitsubishi	6M60-TLE2A
	GR-250N-1-00104	363-612-10000	Mitsubishi	6M60-TLE2A
	GR-250N-1-00105	363-612-10000	Mitsubishi	6M60-TLE2A
	GR-250N-1-00106	363-612-10000	Mitsubishi	6M60-TLE2A
GR-300N-1	GR-300N-1-00101	363-612-50000 (FC5090~)	Mitsubishi	6M60-TLE2A
		363-611-10000 (~FC5089)	Mitsubishi	6M60-TLE2A
	GR-300N-1-00102	363-612-50000 (FC5090~)	Mitsubishi	6M60-TLE2A
		363-611-10000 (~FC5089)	Mitsubishi	6M60-TLE2A
TR-350M-1	TR-350M-1-00101	363-607-30000 (505652~)	Mitsubishi	6D16-T
		363-603-50001 (~505651)	Mitsubishi	6D16-T
	TR-350M-1-00102	363-607-30000 (505652~)	Mitsubishi	6D16-T
		363-603-50001 (~505651)	Mitsubishi	6D16-T
	TR-350M-1-00103	363-607-30000 (505652~)	Mitsubishi	6D16-T
		363-603-50001 (~505651)	Mitsubishi	6D16-T

TR-350M-1-00104	363-607-30000 (505652~)	Mitsubishi	6D16-T	
	363-603-50001 (~505651)	Mitsubishi	6D16-T	
TR-350M-1-00105	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00106	363-607-30000 (505652~)	Mitsubishi	6D16-T	
	363-603-50001 (~505651)	Mitsubishi	6D16-T	
TR-350M-1-00107	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00108	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00109	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00110	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00201	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00202	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00203	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00204	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00205	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00206	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00207	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00208	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-1-00209	363-607-30000	Mitsubishi	6D16-T	
TR-350M-1-00210	363-607-30000 (505499~)	Mitsubishi	6D16-T	
	363-603-50001 (~505498)	Mitsubishi	6D16-T	
TR-350M-2	TR-350M-2-00101	363-607-50000	Mitsubishi	6D22-T
	TR-350M-2-00102	363-607-50000	Mitsubishi	6D22-T
	TR-350M-2-00103	363-607-50000	Mitsubishi	6D22-T
	TR-350M-2-00104	363-607-50000	Mitsubishi	6D22-T
TR-350M-3	TR-350M-3-00101	363-609-60000	Mitsubishi	6D24-TE1
	TR-350M-3-00102	363-609-60000	Mitsubishi	6D24-TE1
	TR-350M-3-00103	363-609-60000	Mitsubishi	6D24-TE1
	TR-350M-3-00104	363-609-60000	Mitsubishi	6D24-TE1
GR-350N-1	GR-350N-1-00101	363-612-50000	Mitsubishi	6M60-TLE2A
	GR-350N-1-00102	363-612-50000	Mitsubishi	6M60-TLE2A
	GR-350N-1-00104	363-612-50000	Mitsubishi	6M60-TLE2A
TR-400M-1	TR-400M-1-00101	363-601-20000	Nissan	PE6T03
	TR-400M-1-00103	363-601-20000	Nissan	PE6T03
	TR-400M-1-00106	363-601-20000	Nissan	PE6T03
TR-500M-1	TR-500M-1-00101	363-605-10000	Nissan	PF6T03
	TR-500M-1-00102	363-605-10000	Nissan	PF6T03
	TR-500M-1-00103	363-605-10000	Nissan	PF6T03

	TR-500M-1-00104	363-605-10000	Nissan	PF6T03
	TR-500M-1-00105	363-605-10000	Nissan	PF6T03
TR-500M-2	TR-500M-2-00101	363-606-90000	Nissan	PF6T13
	TR-500M-2-00102	363-606-90000	Nissan	PF6T13
	TR-500M-2-00103	363-606-90000	Nissan	PF6T13
	TR-500M-2-00104	363-606-90000	Nissan	PF6T13
	TR-500M-2-00105	363-606-90000	Nissan	PF6T13
	TR-500M-2-00106	363-606-90000	Nissan	PF6T13
TR-500M-3	TR-500M-3-00101	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00102	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00103	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00105	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00106	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00111	363-609-30000	Nissan	PF6TA13
	TR-500M-3-00113	363-609-30000	Nissan	PF6TA13
	TR-500M-3-01103	363-609-30000	Nissan	PF6TA13
GR-500N-1	GR-500N-1-00101	363-612-00000	Nissan	GE13
	GR-500N-1-00102	363-612-00000	Nissan	GE13
	GR-500N-1-00103	363-612-00000	Nissan	GE13
	GR-500N-1-00104	363-612-00000	Nissan	GE13
	GR-500N-1-00105	363-612-00000	Nissan	GE13
GR-600N-1	GR-600N-1-00101	363-612-00000	Nissan	GE13

TR-80M-1, TR-80ML-1 Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-80M-1-00101	TR-80M-1-00102	TR-80M-1-00103	TR-80M-1-00104	TR-80M-1-00105	TR-80M-1-00106						
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1		
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1		
3	CARTRIDGE (Oil filter on return circuit, Inside of chassis frame)		*****		*****		*****		*****		*****			
4	FILTER (Line filter on return circuit, On relief valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1		
5	FILTER (Line filter, On winch circuit)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1		
6	ELEMENT (Line filter on winch circuit, On multiple control valve)		*****		*****		366-719-75040	2	366-719-75040	2	366-719-75040	2		
7	FILTER (Line filtr, On air reservoir of service brake)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1		
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2		
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1		
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1		
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1		
ENGINE ※1			Hino W04C-T		Hino W04C-T		Hino W04C-T		Hino W04C-T		Hino W04C-T			
1	ELEMENT (Air cleaner, On air inlet)		347-808-37510	1	347-808-37510	1	347-808-37510	1	347-808-37510	1	347-808-37510	1		
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1341	1	23401-1341	1	23401-1341	1	23401-1341	1	23401-1341	1		
3	CARTRIDGE (Oil filter, Side of engine)		15607-1480	1	15607-1480	1	15607-1480	1	15607-1480	1	15607-1480	1		

Remark
 ※1: The engine serial number should be informed us at placing an order.

TR-100M-1, TR-100ML-1 Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-100M-1-00101	TR-100M-1-00102	TR-100M-1-00103	TR-100M-1-00104	TR-100M-1-00105	TR-100M-1-00106	TR-100M-1-00107	TR-100M-1-00108
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	366-713-10050	366-713-10050	366-713-10050	366-713-10050	366-713-10050	366-713-10050	366-713-10050
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	531-560-05011	531-560-05011	531-560-05011	531-560-05011	531-560-05011	531-560-05011	531-560-05011
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		*****	*****	*****	*****	*****	*****	*****	*****
4	ELEMENT (Line filter on winch clutch circuit, On winch clutch valve)		366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)	366-719-75040 (~FC1170)
			366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)	366-719-75040 (FC1171~)
5	FILTER (Line filter, On air reservoir of service brake)		343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	366-455-45010	366-455-45010	366-455-45010	366-455-45010	366-455-45010	366-455-45010	366-455-45010
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	366-712-79510	366-712-79510	366-712-79510	366-712-79510	366-712-79510	366-712-79510	366-712-79510
2	BREATHER (Air breather, On transmission)		363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610
3	BREATHER (Air breather, On torque converter)		363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610	363-702-07610
ENGINE ※1			Hino W04D-T	Hino W04D-T	Hino W04D-T	Hino W04D-T	Hino W04D-T	Hino W04D-T	Hino W04D-T	Hino W04D-T
1	ELEMENT (Air cleaner, On air inlet)		347-808-37510	347-808-37510	347-808-37510	347-808-37510	347-808-37510	347-808-37510	347-808-37510	347-808-37510
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1133	23401-1133	23401-1133	23401-1133	23401-1133	23401-1133	23401-1133	23401-1133
3	CARTRIDGE (Oil filter, Side of engine)		15607-1480	15607-1480	15607-1480	15607-1480	15607-1480	15607-1480	15607-1480	15607-1480

Remarks

※1: The engine serial number should be informed us at placing an order.

GR-100N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-100N-1-00101	GR-100N-1-00102	GR-100N-1-00103	GR-100N-1-00104	GR-100N-1-00105	GR-100N-1-00106
HYDRAULIC OIL CIRCUIT								
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)						366-713-10050	1
2	ELEMENT (Air breather, On hydraulic oil tank)						531-560-05011	1
3	CARTRIDGE (Oil filter on return circuit, Lower left side of center joint)						366-701-09511	1
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)						347-819-57520	1
5	ELEMENT (Line filter, On winch brake circuit)						366-719-75040	1
6	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)						366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM								
1	ELEMENT (Oil filter of toruque converter circuit, Lower of chassis frame)						366-712-79510	1
2	BREATHER (Air breather, On transmission)						363-702-07610	1
3	BREATHER (Air breather, On torque converter)						363-702-07610	1
4	ELEMENT (Line filter, Inside of transmission)						*****	
ENGINE ※1							Mitsubishi 4M50-TL	
1	ELEMENT (Air cleaner, On air inlet)						347-805-27510	1
2	CARTRIDGE (Fuel filter, Side of engine)						ME132525	1
3	CARTRIDGE (Oil filter, Side of engine)						ME088532	1
4	ELEMENT (Water separator of fuel, Side of fuel tank)						*****	

Remark

※1 : The engine number should be informed us at placing an order.

GR-120N,NL-1 (NO.1)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-120N-1-00101	GR-120N-1-00102	GR-120N-1-00103	GR-120N-1-00104	GR-120N-1-00105	GR-120N-1-00106	GR-120N-1-00107	GR-120N-1-00108				
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1
3	CARTRIDGE (Oil filter on return circuit, Lower right of center joint)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)		347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1
5	ELEMENT (Line filter, On winch brake circuit) ※2		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
6	ELEMENT (Line filter on winch brake and clutch circuit, On winch clutch valve) ※3		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
7	FILTER (Line filter on hi-speed hoist-down circuit, On solenoid valve) ※2		366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRAIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
ENGINE ※1			Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL
1	ELEMENT (Air cleaner, On Air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME132525	1	ME132525	1	ME132525	1	ME132525	1	ME132525	1	ME132525	1
3	CARTRIDGE (Oil filter, Side of engine)		ME088532	1	ME088532	1	ME088532	1	ME088532	1	ME088532	1	ME088532	1

Remarks

※1: The engine number should be informed us at placing an order.

※2: This filter is installed only for crane, winch free-fall system is not equipped.

※3: This filter is installed only for crane, winch free-fall system is equipped.

GR-120N,NL-1 (NO.2)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-120N-1-00111	GR-120N-1-00112	GR-120N-1-00113	GR-120N-1-00114	GR-120N-1-00115	GR-120N-1-00116	GR-120N-1-00117	GR-120N-1-00118				
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1	366-713-10050	1
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1
3	CARTRIDGE (Oil filter on return circuit, Lower right of center joint)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)		347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1
5	ELEMENT (Line filter, On winch brake circuit) ※2		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
6	ELEMENT (Line filter on winch brake and clutch circuit, On winch clutch valve) ※3		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
7	FILTER (Line filter on hi-speed hoist-down circuit, On solenoid valve) ※2		366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1	366-726-30000	1
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
ENGINE ※1			Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL	Mitsubishi 4M50-TL
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME132525	1	ME132525	1	ME132525	1	ME132525	1	ME132525	1	ME132525	1
3	CARTRIDGE (Oil filter, Side of engine)		ME088532	1	ME088532	1	ME088532	1	ME088532	1	ME088532	1	ME088532	1

Remarks

※1: The engine number should be informed us at placing an order.

※2: This filter is installed only for crane, winch free-fall system is not equipped.

※3: This filter is installed only for crane, winch free-fall system is equipped.

GR-120F-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-120F-1-00101	GR-120F-1-00102	GR-120F-1-00103	GR-120F-1-00104	GR-120F-1-00105	GR-120F-1-00106		
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-713-10050	1							
2	ELEMENT (Air breather, On hydraulic oil tank)	531-560-05011	1							
3	CARTRIDGE (Oil filter on return circuit, Front right side of center joint)	366-701-09511	1							
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)	347-819-57520	1							
5	ELEMENT (Line filter, On winch brake circuit)	366-719-75040	1							
6	ELEMENT (Line filter, On winch brake and clutch circuit)	*****								
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)	366-455-45010	2							
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter, Backside of transmission)	366-712-79510	1							
2	BREATHER (Air breather, On transmission)	363-702-07610	1							
3	BREATHER (Air breather, On torque converter)	363-702-07610	1							
ENGINE ※1		Mitsubishi 4M50-TL								
1	ELEMENT (Air cleaner, On air inlet)	347-805-27510	1							
2	CARTRIDGE (Fuel filter, Side of engine)	ME132525	1							
3	CARTRIDGE (Oil filter, Side of engine)	ME088532	1							
4	ELEMENT (Water separator of fuel, Side of fuel tank)	*****								

Remarks

※1: The engine number should be informed us at placing an order.

GR-120F-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-120F-1-00101	GR-120F-1-00102	GR-120F-1-00103	GR-120F-1-00104	GR-120F-1-00105	GR-120F-1-00106		
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-713-10050	1							
2	ELEMENT (Air breather, On hydraulic oil tank)	531-560-05011	1							
3	CARTRIDGE (Oil filter on return circuit, Front right side of center joint)	366-701-09511	1							
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)	347-819-57520	1							
5	ELEMENT (Line filter, On winch brake circuit)	366-719-75040	1							
6	ELEMENT (Line filter, On winch brake and clutch circuit)	*****								
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)	366-455-45010	2							
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter, Backside of transmission)	366-712-79510	1							
2	BREATHER (Air breather, On transmission)	363-702-07610	1							
3	BREATHER (Air breather, On torque converter)	363-702-07610	1							
ENGINE ※1		Mitsubishi 4M50-TL								
1	ELEMENT (Air cleaner, On air inlet)	347-805-27510	1							
2	CARTRIDGE (Fuel filter, Side of engine)	ME132525	1							
3	CARTRIDGE (Oil filter, Side of engine)	ME088532	1							
4	ELEMENT (Water separator of fuel, Side of fuel tank)	*****								

Remarks

※1: The engine number should be informed us at placing an order.

TR-160M-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-160M-1-00101	TR-160M-1-00104	TR-160M-1-00202										
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		344-600-00010	1	344-600-00010	1	344-600-00010	1							
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1							
3	ELEMENT (Oil filter on return circuit, On right side of swing frame)		366-702-05030	1	366-702-05030	1	366-702-05030	1							
4	FILTER (Oil filter on steering circuit, On left side of swing frame)		190-451-08030	1	190-451-08030	1	190-451-08030	1							
5	FILTER (Filter inside of check valve on winch clutch circuit, On right side of swing frame)		366-200-15030	4	366-200-15030	4	343-400-21700	2							
6	ELEMENT (Line filter on return circuit, On relief valve)		*****		*****		343-400-21700	1							
7	FILTER (Filtr inside of hydraulic valve on telescoping circuit, On right side of swing frame)		366-200-15030	1	*****		366-402-75040	1							
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-200-25040	2	366-200-25040	2	366-200-25040	2							
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Forward of torque converter)		591-515-01030	1	591-515-01030	1	591-515-01030	1							
2	BREATHER (Air breather, On transmission)		363-501-15280	1	363-501-15280	1	363-501-15280	1							
3	BREATHER (Air breather, On torque converter)		346-720-05140	1	346-720-05140	1	346-720-05140	1							
ENGINE ※1			Mitsubishi 6D15W		Mitsubishi 6D15W		Mitsubishi 6D15W								
1	ELEMENT INNER (Air cleaner, On air inlet)		346-700-15040	1	346-700-15040	1	346-700-15040	1							
	ELEMENT OUTER (Air cleaner, On air inlet)		344-202-67510	1	344-202-67510	1	344-202-67510	1							
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1							
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1							
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		348-801-77540	1							

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-160M-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-160M-2-00101	TR-160M-2-00102	TR-160M-2-00103	TR-160M-2-00104	TR-160M-2-00201							
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1	366-700-30010	1	366-700-30010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1	531-560-05011	1	531-560-05011	1				
3	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
4	ELEMENT (Line filter on return circuit, On relief valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
5	FILTER (Line filtr on winch circuit, On hydraulic valve)		343-400-21700	3	343-400-21700	3	343-400-21700	4	343-400-21700	3	*****			
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
ENGINE ※1			Mitsubishi 6D31		Mitsubishi 6D31		Mitsubishi 6D31		Mitsubishi 6D31		Mitsubishi 6D34-TE1			
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1				
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1				
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1				

Remarks

※1: The engine number should be informed us at placing an order.

TR-160M-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-160M-3-00101	TR-160M-3-00103										
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-700-30010	1	366-700-30010	1									
2	ELEMENT (Air breather, On hydraulic oil tank)	336-600-07511	1	336-600-07511	1									
3	CARTRIDGE (Oil filter on return circuit, Right forward of center joint)	366-701-09511	1	366-701-09511	1									
4	FILTER (Oil filter on outrigger circuit, Lower of center joint)	366-721-79510	1	366-721-79510	1									
5	FILTER (Filter on steering circuit, On flow-control valve)	366-724-60000	1	366-724-60000	1									
6	ELEMENT (Line filter, On winch brake and clutch circuit)	343-400-21700	2	343-400-21700	2									
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)	366-455-45010	2	366-455-45010	2									
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Forward of torque converter)	366-712-79510	1	366-712-79510	1									
2	BREATHER (Air breather, On transmission)	363-702-07610	1	363-702-07610	1									
3	BREATHER (Air breather, On torque converter)	363-702-07610	1	363-702-07610	1									
ENGINE ※1		Hino H07C-TF		Hino H07C-TF										
1	ELEMENT (Air cleaner, On air inlet)	355-200-37520	1	355-200-37520	1									
2	CARTRIDGE (Fuel filter, Side of engine)	23401-1510	1	23401-1510	1									
3	CARTRIDGE (Oil filter, Side of engine)	15607-1733	1	15607-1733	1									

Remarks

※1: The engine number should be informed us at placing an order.

GR-180N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-180N-1-00101												
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Return filter, Inside of hydraulic oil tank)		366-700-30010	1											
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1											
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		366-701-09511	1											
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)		347-819-57520	1											
5	ELEMENT (Line filter, On winch brake circuit)		366-719-75040	1											
6	ELEMENT (Line filter, On winch brake and clutch circuit)		*****												
7	ELEMENT (Line filter inside of solenoid valve on automatic stop circuit)		366-455-45010	2											
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Backside of transmission)		366-712-75070	1											
2	BREATHER (Air breather, On transmission)		363-702-07610	1											
3	BREATHER (Air breather, On torque converter)		363-702-07610	1											
ENGINE ※1			Cummins QSB5.9-137C												
1	ELEMENT (Air cleaner, On air inlet)		347-820-27510	1											
2	CARTRIDGE (Fuel filter, Side of engine)														
3	CATRIDGE (Oil filter, Side of engine)														
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****												

Remarks

※1: The engine number should be informed us at placing an order.

GR-180N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-180N-1-00101															
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Return filter, Inside of hydraulic oil tank)		366-700-30010	1														
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1														
3	CARTRIDGE (Oil filter on return circuit, Lower of chassis frame)		366-701-09511	1														
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)		347-819-57520	1														
5	ELEMENT (Line filter, On winch brake circuit)		366-719-75040	1														
6	ELEMENT (Line filter, On winch brake and clutch circuit)		*****															
7	ELEMENT (Line filter inside of solenoid valve on automatic stop circuit)		366-455-45010	2														
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Backside of transmission)		366-712-75070	1														
2	BREATHER (Air breather, On transmission)		363-702-07610	1														
3	BREATHER (Air breather, On torque converter)		363-702-07610	1														
ENGINE ※1			Cummins QSB5.9-137C															
1	ELEMENT (Air cleaner, On air inlet)		347-820-27510	1														
2	CARTRIDGE (Fuel filter, Side of engine)																	
3	CATRIDGE (Oil filter, Side of engine)																	
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****															

Remarks

※1: The engine number should be informed us at placing an order.

TR-200M-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200M-3-00103	TR-200M-3-00105										
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		344-600-00010	1	344-600-00010	1								
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	1	531-560-05011	1								
3	ELEMENT (Oil filter on return circuit, On right side of swing frame)		366-702-05030	1	366-702-05030	1								
4	FILTER (Oil filter on steering circuit, On left side of swing frame)		190-451-08030	1	190-451-08030	1								
5	FILTER (Line filter on steering circuit, Center of swing frame)		343-400-21700	1	343-400-21700	1								
6	FILTER (Filtr with throttle on winch brake circuit, Inside of ckeck valve)		366-404-65040	2	366-404-65040	2								
7	FILTER (Filter on boom telescoping circuit, Inside of hydrulic valve)		366-402-75040	1	366-402-75040	1								
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-200-25040	2	366-200-25040	2								
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Forward of torque converter)		591-515-01030	1	591-515-01030	1								
2	BREATHER (Air breather, On transmission)		363-501-15280	1	363-501-15280	1								
3	BREATHER (Air breather, On torque converter)		346-720-05140	1	346-720-05140	1								
4	ELEMENT (Filter, Inside of pressure regulator valve on transmission)		*****		*****									
5	ELEMENT (Filter, Inside of lock up valve on transmission)		363-700-86310 (520478~)	1	363-700-86310 (520478~)	1								
ENGINE ※1			Hino H06C		Hino H06C									
1	ELEMENT INNER (Air cleaner, On air inlet)		334-202-67510	1	334-202-67510	1								
	ELEMENT OUTER (Air cleaner, On air inlet)		334-202-67520	1	334-202-67520	1								
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1290	1	23401-1290	1								
3	CARTRIDGE (Oil filter, Side of engine)		15607-1320	1	15607-1320	1								
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****									

Remarks

※1: The engine number should be informed us at placing an order.

TR-200M-4 (NO.1)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200M-4-00101	TR-200M-4-00102	TR-200M-4-00103	TR-200M-4-00104	TR-200M-4-00105	TR-200M-4-00106	TR-200M-4-00107	TR-200M-4-00108
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010 1	366-700-30010 1	366-700-30010 1	366-700-30010 1	366-700-30010 1	366-700-30010 1	366-700-30010 1	366-700-30010 1
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011 1	531-560-05011 1	531-560-05011 1	531-560-05011 1	531-560-05011 1	531-560-05011 1	531-560-05011 1	531-560-05011 1
3	CARTRIDGE (Oil filter on return circuit, Right forward of center joint)		*****	*****	*****	*****	*****	*****	*****	*****
4	FILTER (Line filter on steering circuit, Center of swing frame)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1
5	ELEMENT (Line filter on main winch brake circuit, On hydraulic valve)		343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1	343-400-21700 (521729~) 1
			343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2	343-400-21700 (~521728) 2
6	FILTER (Line filter on aux. winch brake circuit, On hydraulic valve)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1
7	FILTER (Line filtr on winch clutch circuit, On relief valve)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1
8	FILTER (Filter on boom telescoping circuit, Inside of hydraulic valve)		366-402-75040 1	366-402-75040 1	366-402-75040 1	366-402-75040 1	366-402-75040 1	366-402-75040 1	366-402-75040 1	366-402-75040 1
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1
2	BREATHER (Air breather, On transmission)		363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-702-07610 1	363-702-07610 1	363-702-07610 1	363-702-07610 1
3	BREATHER (Air breather, On torque converter)		363-700-55710 1	363-700-55710 1	*****	*****	363-702-07610 1	363-702-07610 1	363-702-07610 1	363-702-07610 1
4	ELEMENT (Filter, Inside of pressure regulator valve on transmission)		363-500-36791 1	363-500-36791 1	363-500-36791 1	363-500-36791 1	*****	*****	*****	*****
5	ELEMENT (Filter, Inside of lock up valve on transmission)		363-500-36791 1	363-500-36791 1	363-500-36791 1	363-500-36791 1	*****	*****	*****	*****
ENGINE ※1			Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T	Mitsubishi 6D14-T
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510 1	347-805-27510 1	347-805-27510 1	347-805-27510 1	347-805-27510 1	347-805-27510 1	347-805-27510 1	347-805-27510 1
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1
3	CARTRIDGE (Oil filter, Side of engine)		ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****	*****	*****	*****	*****	*****

Remarks

※1: The engine number should be informed us at placing an order.

TR-200M-4 (NO.2)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200M-4-00109	TR-200M-4-00110	TR-200M-4-00111	TR-200M-4-00112								
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-700-30010	1	366-700-30010	1	366-700-30010	1	366-700-30010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011 (~521481)	1	531-560-05011 (~521481)	1	531-560-05011 (~521481)	1	336-600-07511	1				
			336-600-07511 (521482~)	1	336-600-07511 (521482~)	1	336-600-07511 (521482~)	1						
3	CARTRIDGE (Oil filter on return circuit, Right forward of center joint)		*****		*****		*****		*****					
4	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
5	ELEMENT (Line filter on main winch brake circuit, On hydraulic valve)		343-400-21700 (521729~)	1	343-400-21700 (521729~)	1	343-400-21700 (521729~)	1	343-400-21700	1				
			343-400-21700 (~521728)	2	343-400-21700 (~521728)	2	343-400-21700 (~521728)	2						
6	FILTER (Line filter on aux. winch brake circuit, On hydraulic valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
7	FILTER (Line filtr on winch clutch circuit, On relief valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
8	FILTER (Filter on boom telescoping circuit, Inside of hydraulic valve)		*****		*****		*****		*****					
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
4	ELEMENT (Filter, Inside of pressure regulator valve on transmission)		*****		*****		*****		*****					
5	ELEMENT (Filter, Inside of lock up valve on transmission)		*****		*****		*****		*****					
ENGINE ※1			Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T		Mitsubishi 6D14-T					
1	ELEMENT (Air cleaner, On air inlet)		347-805-27510	1	347-805-27510	1	347-805-27510	1	347-805-27510	1				
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1				
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1				
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****					

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-200M-5

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-200M-5-00101	TR-200M-5-00103	TR-200M-5-00201												
HYDRAULIC OIL CIRCUIT																	
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050 2	366-713-10050 2	366-713-10050 2												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511 1	336-600-07511 1	336-600-07511 1												
3	CARTRIDGE (Oil filter on return circuit, Alongside of hydraulic oil tank)		366-701-09511 1	366-701-09511 1	366-701-09511 1												
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-726-15010 1	366-726-15010 1	366-726-15010 1												
5	FILTER (Line filter on upper steering circuit, On priority valve)		366-725-30000 1	366-725-30000 1	366-725-30000 1												
6	FILTER (Line filter on lower steering circuit, Lower right of center joint)		366-725-30000 1	366-725-30000 1	366-725-30000 1												
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010 2	366-455-45010 2	366-455-45010 2												
DRIVING POWER TRANSMISSION SYSTEM																	
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1												
2	BREATHER (Air breather, On transmission)		363-702-07610 1	363-702-07610 1	363-702-07610 1												
3	BREATHER (Air breather, On torque converter)		363-702-07610 1	363-702-07610 1	363-702-07610 1												
4	ELEMENT (Filter, Inside of pressure regulator valve on transmission)		*****	*****	*****												
5	ELEMENT (Filter, Inside of lock up valve on transmission)		*****	*****	*****												
ENGINE ※1			Hino H07C-TF	Hino H07C-TF	Hino H07C-TF												
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520 1	355-200-37520 1	355-200-37520 1												
2	CARTRIDGE (Fuel filter, Side of engine)		23401-1510 1	23401-1510 1	23401-1510 1												
3	CARTRIDGE (Oil filter, Side of engine)		15607-1733 1	15607-1733 1	15607-1733 1												
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****												

Remarks

※1: The engine number should be informed us at placing an order.

TR-250M-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-3-00101	TR-250M-3-00102	TR-250M-3-00103	TR-250M-3-00121	TR-250M-3-00122							
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		*****	*****	*****	*****	*****							
2	ELEMENT (Air breather, On hydraulic oil tank)		531-560-05011	531-560-05011	531-560-05011	531-560-05011	531-560-05011							
3	FILTER ELEMENT (Oil filter On return circuit, On right side of swing frame)		366-702-05030	366-702-05030	366-702-05030	366-702-05030	366-702-05030							
4	FILTER (Oil filter on steering circuit, On left side of swing frame)		190-451-08030	190-451-08030	190-451-08030	190-451-08030	190-451-08030							
5	FILTER (Filter inside of check valve on winch brake circuit, On right side of swing frame)		343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700							
6	FILTER (Line filtr on winch clutch circuit, On relief valve)		343-400-21700	343-400-21700	343-400-21700	343-400-21700	343-400-21700							
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	366-517-15300	366-517-15300	366-517-15300	366-517-15300							
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter on torque converter circuit, Forward of torque converter)		591-515-01030 (~515645)	591-515-01030 (~515645)	591-515-01030 (~515645)									
			366-710-35010 (515646~)	366-710-35010 (515646~)	366-710-35010 (515646~)	366-710-35010	366-710-35010							
2	BREATHER (Air breather, On transmission)		363-700-55710	363-700-55710	363-700-55710	363-700-55710	363-700-55710							
3	BREATHER (Air breather, On torque converter)		363-700-55710	363-700-55710	363-700-55710	363-700-55710	363-700-55710							
4	ELEMENT (Filter inside on reducing valve on transmission)		363-500-36790	363-500-36790	363-500-36790	363-500-36790	363-500-36790							
ENGINE ※1			Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603	Nissan PD603							
1	ELEMENT INNER (Air cleaner, On air inlet)		346-700-15040	346-700-15040	346-700-15040	346-700-15040	346-700-15040							
	ELEMENT OUTER (Air cleaner, On air inlet)		334-202-67510	334-202-67510	334-202-67510	334-202-67510	334-202-67510							
2	CARTRIDGE (Fuel filter, Side of engine)		16444-99128	16444-99128	16444-99128	16444-99128	16444-99128							
3	CARTRIDGE/ELEMENT (Oil filter, full-flow, Side of engine)		15274-99885	15274-99885	15274-99885	15274-99885	15274-99885							
	CARTRIDGE/ELEMENT (Oil filter, by-pass, Side of engine)		15274-99289	15274-99289	15274-99289	15274-99289	15274-99289							

Remarks
 ※1: The engine serial number should be informed us at placing an order.

TR-250M-4 (NO.1)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-4-00101	TR-250M-4-00102	TR-250M-4-00103	TR-250M-4-00104	TR-250M-4-00105	TR-250M-4-00106	TR-250M-4-00107	TR-250M-4-00108
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1
3	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1
4	ELEMENT (Line filter on return circuit, Side of accumulator)		343-400-21700 (516612~) 1	343-400-21700 (516612~) 1	343-400-21700 (516612~) 1	343-400-21700 1	343-400-21700 (516612~) 1	343-400-21700 (516612~) 1	343-400-21700 (516612~) 1	343-400-21700 1
			343-400-21700 (~516611) 2	343-400-21700 (~516611) 2	343-400-21700 (~516611) 2		343-400-21700 (~516611) 2	343-400-21700 (~516611) 2	343-400-21700 (~516611) 2	
5	FILTER (Line filter on main winch circuit, On right side of swing frame)		343-400-21700 2	343-400-21700 2	343-400-21700 2	343-400-21700 2	343-400-21700 2	343-400-21700 2	343-400-21700 2	343-400-21700 2
6	FILTER (Line filtr on aux. winch circuit, On hydraulic valve)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300 2	366-517-15300 2	366-517-15300 2	366-517-15300 2	366-517-15300 2	366-517-15300 2	366-517-15300 2	366-517-15300 2
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter, Forward of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1
2	BREATHER (Air breather, On transmission)		363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1
3	BREATHER (Air breather, On torque converter)		363-700-55710 1	363-700-55710 1	363-700-55710 1	*****	363-700-55710 1	363-700-55710 1	363-700-55710 1	*****
4	ELEMENT (Filter inside on reducing valve on transmission)		363-500-36790 1	363-500-36790 1	363-500-36790 1	363-500-36790 1	363-500-36790 1	363-500-36790 1	363-500-36790 1	*****
ENGINE ※1			Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T
1	ELEMENT SINGLE (Air cleaner, On air inlet)		347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1	347-804-37540 (517185~) 1
	ELEMENT INNER (Air cleaner, On air inlet)		334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	334-202-67510 (~517184) 1	*****
	ELEMENT OUTER (Air cleaner, On air inlet)		334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	334-202-67520 (~517184) 1	*****
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1
3	CARTRIDGE (Oil filter, Side of engine)		ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****	*****	*****	*****	*****	*****

Remarks

※1: The engine serial number should be informed us at placing an order.

TR-250M-4 (NO.2)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-4-00109	TR-250M-4-00110														
HYDRAULIC OIL CIRCUIT																		
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2												
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1												
3	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700	1	343-400-21700	1												
4	ELEMENT (Line filter on return circuit, Side of accumulator)		343-400-21700	1	343-400-21700	1												
5	FILTER (Line filter on main winch circuit, On right side of swing frame)		343-400-21700	2	343-400-21700	2												
6	FILTER (Line filter on aux. winch circuit, On hydraulic valve)		343-400-21700	1	343-400-21700	1												
7	ELEMENT (Line filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-517-15300	2												
DRIVING POWER TRANSMISSION SYSTEM																		
1	ELEMENT (Oil filter, Front of torque converter)		366-712-79510	1	366-712-79510	1												
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1												
3	BREATHER (Air breather, On torque converter)		*****		*****													
4	ELEMENT (Filter inside on reducing valve on transmission)		*****		363-500-36790	1												
ENGINE ※1			Mitsubishi 6D16-T		Mitsubishi 6D16-T													
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1												
	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****													
	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****													
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1												
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1												
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****													

Remarks

※1: The engine serial number should be informed us at placing an order.

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-5-00101	TR-250M-5-00102	TR-250M-5-00103	TR-250M-5-00104	TR-250M-5-00105	TR-250M-5-00106	TR-250M-5-00107	TR-250M-5-00108	
HYDRAULIC OIL CIRCUIT											
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2	
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1	
3	FILTER (Line filter on steering circuit, On priority valve)		343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	343-400-21700 1	
			366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1
4	ELEMENT (Line filter on return circuit, Side of accumulator)		343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	343-400-21700 (~FB3082) 1	
			366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1
5	FILTER (Line filter on winch circuit, On right side of swing frame)		343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	343-400-21700 (FB0647~82) 1	
			366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1
			343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3	343-400-21700 (~FB0646) 3
6	FILTER (Line filter on 3rd winch circuit)		*****	366-719-75040 (FB3083~) 1	*****	*****	366-719-75040 (FB3083~) 1	*****	*****	*****	
			*****	343-400-21700 (~FB3082) 1	*****	*****	343-400-21700 (~FB3082) 1	*****	*****	*****	
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300 2	366-517-15300 2	366-517-15300 2	366-429-25010 (FB0368~) 2	366-429-25010 (FB0368~) 2	366-429-25010 (FB0368~) 2	366-429-25010 (FB0368~) 2	366-429-25010 (FB0368~) 2	
			366-517-15300 2	366-517-15300 2	366-517-15300 2	366-455-45010 (~FB0367) 2	366-455-45010 (~FB0367) 2	366-455-45010 (~FB0367) 2	366-455-45010 (~FB0367) 2	366-455-45010 (~FB0367) 2	
DRIVING POWER TRANSMISSION SYSTEM											
1	ELEMENT (Oil filter, Front of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1	
2	BREATHER (Air breather, On transmission)		363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1	
3	BREATHER (Air breather, On torque converter)		*****	*****	*****	*****	*****	*****	*****	*****	
ENGINE ※1			Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540 1	347-804-37540 1	347-804-37540 1	347-804-37540 1	347-804-37540 1	347-804-37540 1	347-804-37540 1	347-804-37540 1	
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	ME015254 1	
3	CARTRIDGE (Oil filter, Side of engine)		ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	ME130968 1	
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****	*****	*****	*****	*****	*****	

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-250M-6

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-6-00101	TR-250M-6-00102	TR-250M-6-00103	TR-250M-6-00104	TR-250M-6-00105	TR-250M-6-00106	TR-250M-6-00107
HYDRAULIC OIL CIRCUIT									
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2		366-713-10050 2	366-713-10050 2
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1		336-600-07511 1	336-600-07511 1
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic tank)		366-701-09511 1	366-701-09511 1	366-701-09511 1	366-701-09511 1		366-701-09511 1	366-701-09511 1
4	ELEMENT (Oil filter element on suspension circuit, Lower of center joint)		366-726-15010 1	366-726-15010 1	366-726-15010 1	366-726-15010 1		366-726-15010 1	366-726-15010 1
5	FILTER (Line filter on steering circuit, On priority valve)		366-725-30000 1	366-725-30000 1	366-725-30000 1	366-725-30000 1		366-725-30000 1	366-725-30000 1
6	FILTER (Line filter on winch circuit, On right side of swing frame)		366-719-75040 (FB3083~) 1	***** 1	366-719-75040 (FB3083~) 1	366-719-75040 (FB3083~) 1		343-400-21700 (FB2270~) 1	343-400-21700 (FB2270~) 1
			343-400-21700 (~FB3082) 2	343-400-21700 (~FB3082) 2	343-400-21700 (~FB3082) 2	343-400-21700 (~FB3082) 2		343-400-21700 (~FB2269) 2	343-400-21700 (~FB2269) 2
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2		366-455-45010 2	366-455-45010 2
DRIVING POWER TRANSMISSION SYSTEM									
1	ELEMENT (Oil filter, Front of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1		366-712-79510 1	366-712-79510 1
2	BREATHER (Air breather, On transmission)		363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1		363-700-55710 1	363-700-55710 1
3	BREATHER (Air breather, On torque converter)		*****	*****	*****	*****		*****	*****
4	ELEMENT (Filter, Inside of transmission)		363-504-65380 1	363-504-65380 1	363-504-65380 1	363-504-65380 1		363-504-65380 1	363-504-65380 1
ENGINE ※1			Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T		Mitsubishi 6D16-T	Mitsubishi 6D16-T
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520 1	355-200-37520 1	355-200-37520 1	355-200-37520 1		355-200-37520 1	355-200-37520 1
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254 1	ME015254 1	ME015254 1	ME015254 1		ME015254 1	ME015254 1
3	CARTRIDGE (Oil filter, Side of engine)		ME131824 1	ME131824 1	ME131824 1	ME131824 1		ME131824 1	ME131824 1
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****	*****		*****	*****

Remarks

※1: The engine number should be informed us at placing an order.

TR-250M-7

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-250M-7-00101	TR-250M-7-00102	TR-250M-7-00103	TR-250M-7-00104									
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050 2	366-713-10050 2	366-713-10050 2	366-713-10050 2									
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511 1	336-600-07511 1	336-600-07511 1	336-600-07511 1									
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic tank)		366-701-09511 1	366-701-09511 1	366-701-09511 1	366-701-09511 1									
4	ELEMENT (Oil filter element on suspension circuit, Lower of center joint)		366-626-15010 1	366-626-15010 1	366-626-15010 1	366-626-15010 1									
5	FILTER (Line filter on steering circuit, On priority valve)		366-725-30000 1	366-725-30000 1	366-725-30000 1	366-725-30000 1									
6	FILTER (Line filter on winch circuit, On right side of swing frame)		366-719-75040 (FB3083~) 1	366-719-75040 1	366-719-75040 1	366-719-75040 1									
			343-400-21700 (~FB3082) 2												
7	FILTER (Line filter on 3rd winch circuit, On clutch valve)		*****	*****	*****	343-400-21700 1									
8	ELEMENT (Line filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010 2	366-455-45010 2	366-455-45010 2	366-455-45010 2									
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Front of torque converter)		366-712-79510 1	366-712-79510 1	366-712-79510 1	366-712-79510 1									
2	BREATHER (Air breather, On transmission)		363-700-55710 1	363-700-55710 1	363-700-55710 1	363-700-55710 1									
3	BREATHER (Air breather, On torque converter)		*****	*****	*****	*****									
4	ELEMENT (Filter, Inside of transmission)		363-504-65380 1	363-504-65380 1	363-504-65380 1	363-504-65380 1									
ENGINE ※1			Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A									
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520 1	355-200-37520 1	355-200-37520 1	355-200-37520 1									
2	CARTRIDGE (Fuel filter, Side of engine)		ME131824 1	ME131824 1	ME131824 1	ME131824 1									
3	CARTRIDGE (Oil filter, Side of engine)		ME130968 1	ME130968 1	ME130968 1	ME130968 1									
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****	*****	*****	*****									

Remarks
 ※1: The engine number should be informed us at placing an order.

TR-350M-1 (NO.1)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350M-1-00101	TR-350M-1-00102	TR-350M-1-00103	TR-350M-1-00104	TR-350M-1-00105	TR-350M-1-00106	TR-350M-1-00107	TR-350M-1-00108				
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1
3	FILTER (Line filter on steering circuit, On center of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1
4	FILTER (Line filter on winch clutch circuit, On left and right sides of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2
5	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1
6	FILTER (Line filter on hydraulic valves on winch main and aux. brake circuit, On right and left side of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	1	343-400-21700	1	343-400-21700	1
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2
8	ELEMENT (Line filter on un-load solenoid valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	*****	*****
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1
3	BREATHER (Air breather, On torque converter)		363-700-55710 (~505130)	1	363-700-55710 (~505130)	1	363-700-55710 (~505130)	1	*****	*****	*****	*****	*****	*****
4	ELEMENT (Element filter of pressure regulator valve, On transmission)		363-500-36790 (~505130)	1	363-500-36790	1	363-500-36790	1	*****	*****	*****	*****	*****	*****
			363-500-36791 (505131~51)	1	*****	*****	*****	*****	*****	*****	*****	*****	*****	*****
5	ELEMENT (Element filter of lock up valve, On transmission)		363-500-36790	1	363-500-36790	1	363-500-36790	1	*****	*****	*****	*****	*****	*****
ENGINE ※1			Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T	Mitsubishi 6D16-T
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540 (505265~)	1	347-804-37540 (505265~)	1	347-804-37540 (505265~)	1	347-804-37540	1	347-804-37540	1	347-804-37540	1
2	ELEMENT INNER (Air cleaner, On Air inlet)		334-202-67510 (~506264)	1	334-202-67510 (~506264)	1	334-202-67510 (~506264)	1	*****	*****	*****	*****	*****	*****
	ELEMENT OUTER (Air cleaner, On air inlet)		344-202-67520 (~506264)	1	344-202-67520 (~506264)	1	344-202-67520 (~506264)	1	*****	*****	*****	*****	*****	*****
3	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1	ME015254	1	ME015254	1
4	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1	ME130968	1	ME130968	1

Remarks

※1: The engine number should be informed us at placing an order.

GR-250N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-250N-1-00101	GR-250N-1-00102	GR-250N-1-00103	GR-250N-1-00104	GR-250N-1-00105	GR-250N-1-00106				
HYDRAULIC OIL CIRCUIT												
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1
4	ELEMENT (Oil filter element on oil cooling circuit, Lower of center joint)		347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1	347-819-57520	1
5	ELEMENT (Line filter, On winch brake circuit)		*****		*****	1	*****		*****		*****	
6	ELEMENT (Line filter, On winch brake and clutch circuit)		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
7	ELEMENT (Line filter, On 3rd winch circuit)		*****		*****		366-719-75040	1	*****		*****	
8	FILTER (Line filter on upper steering circuit, On flow-control valve)		366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM												
1	ELEMENT (Oil filter of torque converter circuit, Front of transmission)		336-712-79510	1	336-712-79510	1	336-712-79510	1	336-712-79510	1	336-712-79510	1
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1	363-700-55710	1
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****		*****	
4	ELEMENT (Filter, Inside of transmission)		363-504-65380	1	363-504-65380	1	363-504-65380	1	363-504-65380	1	363-504-65380	1
ENGINE ※1			Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A	Mitsubishi 6M60-TLE2A
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1	355-200-37520	1	355-200-37520	1	355-200-37520	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME131824	1	ME131824	1	ME131824	1	ME131824	1	ME131824	1
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1	ME130968	1
4	ELEMENT (Water separator of Fuel, Front of fuel tank)		348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1	348-801-77540	1

Remarks

※1 : The engine number should be informed us at placing an order.

GR-300N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-300N-1-00101	GR-300N-1-00102						
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1				
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1				
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-729-65010	1	366-729-65010	1				
5	ELEMENT (Line filter, On winch brake circuit) ※2		366-719-75040 (FC5003~)	1	*****					
			343-400-21700 (~FC5002)	1						
6	ELEMENT (Line filter, On winch brake and clutch circuit) ※3		*****		366-719-75040 (FC5003~)	1				
				343-400-21700 (~FC5002)	1					
7	FILTER (Line filter on upper steering circuit, On flow control valve)		366-725-30000	1	366-725-30000	1				
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of transmission)		366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1				
3	BREATHER (Air breather, On torque converter)		*****		*****					
4	ELEMENT (Line filter, Inside of transmission)		363-504-65380	1	363-504-65380	1				
ENGINE ※1			Mitsubishi 6M60-TLE2A		Mitsubishi 6M60-TLE2A					
1	ELEMENT (Air cleaner, On air inlet)		355-200-37520	1	355-200-37520	1				
2	CARTRIDGE (Fuel filter, Side of engine)		ME131824	1	ME131824	1				
3	CATRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1				
5	ELEMENT (Water separator of fuel, Front of fuel tank)		348-801-77540	1	348-801-77540	1				

Remarks

- ※1 : The engine number should be informed us at placing an order.
- ※2 : This element is installed only on crane, winch free-fall system is not equipped.
- ※3 : This element is installed only on crane, winch free-fall system is equipped.

TR-350M-1 (NO.2)

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350M-1-00109	TR-350M-1-00110	TR-350M-1-00201	TR-350M-1-00202	TR-350M-1-00203	TR-350M-1-00204	TR-350M-1-00205	TR-350M-1-00206				
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic tank)		*****		*****		*****		*****		*****		*****	
4	FILTER (Line filter on steering circuit, On center of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1
5	FILTER (Line filter on winch clutch circuit, On left and right sides of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2
6	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1
7	FILTER (Line filter on hydraulic valves on winch main and aux. brake circuit, On right and left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2
9	ELEMENT (Line filter on un-load solenoid valve)		*****		*****		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1	*****		*****		*****		*****	
3	BREATHER (Air breather, On torque converter)		*****		*****		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****		*****		*****	
5	ELEMENT (Element filter of lock valve, On transmission)		*****		*****		*****		*****		*****		*****	
ENGINE ※1			Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T	
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1	347-804-37540	1	347-804-37540	1	347-804-37540	1	347-804-37540	1
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1	ME015254	1	ME015254	1
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1	ME130968	1	ME130968	1

Remarks

※1: The engine number should be informed us at placing an order.

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350M-1-00207	TR-350M-1-00208	TR-350M-1-00209	TR-350M-1-00210									
HYDRAULIC OIL CIRCUIT															
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2					
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1					
3	FILTER (Line filter on steering circuit, On center of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1					
4	FILTER (Line filter on winch clutch circuit, On left and right sides of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2					
5	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1					
6	FILTER (Line filter on hydraulic valves on winch main and aux. brake circuit, On right and left side of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2					
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2					
8	ELEMENT (Line filter on un-load solenoid valve)		*****		*****		*****		*****						
DRIVING POWER TRANSMISSION SYSTEM															
1	ELEMENT (Oil filter, Inside of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1					
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	*****		*****						
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1					
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****						
5	ELEMENT (Element filter of lock valve, On transmission)		*****		*****		*****		*****						
ENGINE ※1			Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T		Mitsubishi 6D16-T						
1	ELEMENT (Air cleaner, On air inlet)		347-804-37540	1	347-804-37540	1	347-804-37540	1	347-804-37540	1					
2	CARTRIDGE (Fuel filter, Side of engine)		ME015254	1	ME015254	1	ME015254	1	ME015254	1					
3	CARTRIDGE (Oil filter, Side of engine)		ME130968	1	ME130968	1	ME130968	1	ME130968	1					

Remarks

※1: The engine number should be informed us at placing an order.

TR-350M-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350M-2-00101	TR-350M-2-00102	TR-350M-2-00103	TR-350M-2-00104								
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1				
3	FILTER (Oil filter on steering circuit, front of transmission)		366-721-75010	1	366-721-75010	1	366-721-75010	1	366-721-75010	1				
4	FILTER (Line filter on winch circuit, On multiple control valve)		343-400-21700 (~506226)	3	343-400-21700 (~506226)	3	343-400-21700 (~506226)	3	343-400-21700 (~506226)	3				
			343-400-21700 (506227~)	1	343-400-21700 (506227~)	1	343-400-21700 (506227~)	1	343-400-21700 (506227~)	1				
5	FILTER (Line filter on steering circuit, Center of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
6	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1	366-402-75040	1				
7	FILTER (Line filter on 3rd winch circuit, On swing table)		*****		343-400-21700	1	*****		*****					
8	FILTER (Line filter on accumulator circuit, On swing table)		343-400-21700	1	343-400-21700	1	366-719-75040 (506227~)	1	366-719-75040 (506227~)	1				
							343-400-21700 (~506226)	1	343-400-21700 (~506226)	1				
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		*****		*****		*****		*****					
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****					
ENGINE ※1			Mitsubishi 6D22-T		Mitsubishi 6D22-T		Mitsubishi 6D22-T		Mitsubishi 6D22-T					
1	ELEMENT (Air cleaner, On air inlet)		347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1				
2	CARTRIDGE/ELEMENT KIT (By-pass oil filter, Side of engine)		ME121789	1	ME121789	1	ME121789	1	ME121789	1				
3	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME056670	1	ME056670	1	ME056670	1	ME056670	1				
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****					

Remarks

※1: The engine number should be informed us at placing an order.

TR-350M-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-350M-3-00101	TR-350M-3-00102	TR-350M-3-00103	TR-350M-3-00104								
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-713-10050	2	366-713-10050	2	366-713-10050	2	366-713-10050	2				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1				
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1				
4	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1	366-726-15010	1	366-726-15010	1				
5	ELEMENT (Line filter for 3rd winch circuit)		*****		*****		366-719-75040	1	*****					
6	ELEMENT (Line filter on winch brake circuit, On right side of swing frame)		366-719-75040 (506227~)	1	366-719-75040 (506227~)	1	366-719-75040	1	366-719-75040 (506227~)	1				
			343-400-21700 (~506226)	2	343-400-21700 (~506226)	2		343-400-21700 (~506226)	2					
7	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****					
ENGINE ※1			Mitsubishi 6D24-TE1		Mitsubishi 6D24-TE1		Mitsubishi 6D24-TE1		Mitsubishi 6D24-TE1					
1	ELEMENT (Air cleaner, On air inlet)		347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1				
2	CARTRIDGE/ELEMENT (Oil filter kit, by-pass and full-flow, Side of engine)		ME121789	1	ME121789	1	ME121789	1	ME121789	1				
3	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		ME056670	1	ME056670	1	ME056670	1	ME056670	1				
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****					

Remarks

※1: The engine number should be informed us at placing an order.

GR-350N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-350N-1-00101	GR-350N-1-00102	GR-350N-1-00103	GR-350N-1-00104				
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)	366-713-10050	2	366-713-10050	2		366-713-10050	2		
2	ELEMENT (Air breather, On hydraulic oil tank)	336-600-07511	1	336-600-07511	1		336-600-07511	1		
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)	366-701-09511	1	366-701-09511	1		366-701-09511	1		
4	ELEMENT (Line filter, On winch brake circuit) ※2	366-719-75040	1	*****			*****			
5	ELEMENT (Line filter, On winch brake and clutch circuit) ※3	*****		366-719-75040	1		366-719-75040	1		
6	ELEMENT (Line filter, On 3rd winch circuit) ※4	*****		*****			366-719-75040	1		
7	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)	366-455-45010	2	366-455-45010	2		366-455-45010	2		
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of transmission)	366-712-79510	1	366-712-79510	1		366-712-79510	1		
2	BREATHER (Air breather, On transmission)	363-702-07610	1	363-702-07610	1		363-702-07610	1		
3	BREATHER (Air breather, On torque converter)	*****		*****			*****			
4	ELEMENT (Line filter, Inside of transmission)	*****		*****			*****			
ENGINE ※1		Mitsubishi 6M60-TLE2A		Mitsubishi 6M60-TLE2A			Mitsubishi 6M60-TLE2A			
1	ELEMENT (Air cleaner, On air inlet)	355-200-37520	1	355-200-37520	1		355-200-37520	1		
2	CARTRIDGE (Fuel filter, Side of engine)	ME131824	1	ME131824	1		ME131824	1		
3	CATRIDGE (Oil filter, Side of engine)	ME130968	1	ME130968	1		ME130968	1		
4	ELEMENT (Water separator of fuel, Side of fuel tank)	348-801-77540	1	348-801-77540	1		348-801-77540	1		

Remarks

※1 : The engine number should be informed us at placing an order.

※2 : This element is installed only on crane, winch free-fall system is not equipped.

※3 : This element is installed only on crane, winch free-fall system is equipped.

※4 : These element filter is installed only on crane, 3rd winch system is equipped.

TR-400M-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-400M-1-00101	TR-400M-1-00103	TR-400M-1-00106									
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1						
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1						
3	FILTER (Line filter on steering circuit, Side of priority valve)		343-400-21700	1	343-400-21700	1	343-400-21700	1						
4	FILTER (Filter inside of hydraulic valve on boom telescoping circuit, On right side of swing frame)		366-402-75040	1	366-402-75040	1	366-402-75040	1						
5	ELEMENT (Line filter on winch brake circuit, On right side of swing frame)		366-404-65040	2	366-404-65040	2	366-404-65040	2						
6	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2						
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		591-515-01030	1	591-515-01030	1	591-515-01030	1						
2	BREATHER (Air breather, On transmission)		363-501-15280	1	363-501-15280	1	363-501-15280	1						
3	BREATHER (Air breather, On torque converter)		346-720-05140	1	346-720-05140	1	346-720-05140	1						
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****							
ENGINE ※1			Nissan PE6T03		Nissan PE6T03		Nissan PE6T03							
1	ELEMENT INNER (Air cleaner, On air inlet)		347-802-47520	1	347-802-47520	1	347-802-47520	1						
	ELEMENT OUTER (Air cleaner, On air inlet)		363-605-25020	1	363-605-25020	1	363-605-25020	1						
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		16403-99011	1	16403-99011	1	16403-99011	1						
5	CARTRIDGE/ELEMENT (Oil filter, By-pass, Side of engine)		15274-99986	1	15274-99986	1	15274-99986	1						
	CARTRIDGE/ELEMENT (Oil filter, Full-flow, Side of engine)		15274-99985	1	15274-99985	1	15274-99985	1						
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****							

Remarks

※1: The engine number should be informed us at placing an order.

TR-500M-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500M-1-00101	TR-500M-1-00102	TR-500M-1-00103	TR-500M-1-00104	TR-500M-1-00105							
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1				
3	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		*****		*****		*****		*****					
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		*****		*****		*****		*****					
5	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
6	FILTER (Line filter on hydraulic valve on boom telescoping circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
7	FILTER (Line filter on winch clutch circuit, On left side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700	1				
8	ELEMENT (Line filter on winch brake circuit, On left side of swing frame)		343-400-21700	2	343-400-21700	2	343-400-21700	2	343-400-21700	2				
9	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2				
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1				
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****					
ENGINE ※1			Nissan PF6T03		Nissan PF6T03		Nissan PF6T03		Nissan PF6T03					
1	ELEMENT (Air cleaner, On air inlet)		347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1				
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****		*****		*****					
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****		*****		*****					
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1				
5	CARTRIDGE/ELEMENT (Oil filter, By-pass, Side of engine)		15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1				
	CARTRIDGE/ELEMENT (Oil filter, Full-flow, Side of engine)		15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1				
6	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****					
7	ELEMENT KIT (Fuel filter,Option)		*****		*****		*****		*****					

Remarks

※1: The engine number should be informed us at placing an order.

TR-500M-2

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500M-2-00101	TR-500M-2-00102	TR-500M-2-00103	TR-500M-2-00104	TR-500M-2-00105	TR-500M-2-00106						
HYDRAULIC OIL CIRCUIT														
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1		
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1		
3	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		*****		*****		*****		*****		*****			
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		*****		*****		*****		*****		*****			
5	FILTER (Line filter on steering circuit, On right side of swing frame)		343-400-21700 (~582322)	1	343-400-21700 (~582322)	1	343-400-21700 (~582322)	1	343-400-21700 (~582322)	1	343-400-21700 (~582322)	1		
			366-719-75040 (582323~)	1	366-719-75040 (582323~)	1	366-719-75040 (582323~)	1	366-719-75040 (582323~)	1	366-719-75040 (582323~)	1		
6	FILTER (Line filter on hydraulic valve on boom telescoping circuit, On right side of swing frame)		343-400-21700	1	343-400-21700	1	343-400-21700	1	343-400-21700 (~582322)	1	366-402-75040	1	366-402-75040	1
									366-719-75040 (582323~)	1				
7	FILTER (Line filter on winch circuit, On left and right side of swing frame)		343-400-21700	3	343-400-21700	3	343-400-21700	3	343-400-21700	3	343-400-21700	3	343-400-21700	2
			366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2	366-517-15300	2		
DRIVING POWER TRANSMISSION SYSTEM														
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1		
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1		
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1		
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****		*****			
ENGINE ※1			Nissan PF6T13		Nissan PF6T13		Nissan PF6T13		Nissan PF6T13		Nissan PF6T13			
1	ELEMENT (Air cleaner, On air inlet)		347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1		
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****		*****		*****		*****			
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****		*****		*****		*****			
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1		
5	CARTRIDGE/ELEMENT (Oil filter, By-pass, Side of engine)		15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1		
	CARTRIDGE/ELEMENT (Oil filter, Full-flow, Side of engine)		15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1		
6	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****		*****			
7	ELEMENT KIT (Fuel filter, Option)		*****		*****		*****		*****		*****			

Remarks

※1: The engine number should be informed us at placing an order.

TR-500M-3

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	TR-500M-3-00101	TR-500M-3-00102	TR-500M-3-00103	TR-500M-3-00105	TR-500M-3-00106	TR-500M-3-00111	TR-500M-3-00113	TR-500M-3-01103						
HYDRAULIC OIL CIRCUIT																
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1		
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1		
3	ELEMENT (Oil filter on suspension circuit, Lower of center joint)		366-721-75010	1	366-721-75010	1	366-721-75010	1	366-721-75010	1	366-721-75010	1	366-721-75010	1		
4	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1		
5	FILTER (Line filter on steering circuit, On right side of swing frame)		366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1	366-725-30000	1		
6	FILTER (Line filter on hydraulic valve on boom telescoping circuit, On right side of swing frame)		*****		*****		*****		*****		*****		*****			
7	FILTER (Line filter on winch circuit, On left and right side of swing frame)		343-400-21700 (~581955)	2	343-400-21700 (~581955)	2	343-400-21700 (~581955)	2	343-400-21700 (~581955)	2	*****		*****		343-400-21700 (~581955)	2
			343-400-21700 (581956~)	1	343-400-21700 (581956~)	1	343-400-21700 (581956~)	1	343-400-21700 (581956~)	1	343-400-21700 (581956~)	1	343-400-21700 (581956~)	1	343-400-21700 (581956~)	1
			366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1
8	FILTER (Filter element on 3rd winch circuit, On clutch valve)		*****		*****		343-400-21700 (~582322)	1	*****		*****		*****		*****	
			*****		*****		366-719-75040 (582323~)	1	*****		*****		*****		*****	
8	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2
DRIVING POWER TRANSMISSION SYSTEM																
1	ELEMENT (Oil filter, Lower of chassis frame)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
3	BREATHER (Air breather, On torque converter)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1
4	ELEMENT (Element filter, Inside of transmission)		*****		*****		*****		*****		*****		*****		*****	
ENGINE ※1			Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13	Nissan PF6TA13		
1	ELEMENT (Air cleaner, On air inlet)		347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1	347-809-27510	1
2	ELEMENT INNER (Air cleaner, On air inlet)		*****		*****		*****		*****		*****		*****		*****	
3	ELEMENT OUTER (Air cleaner, On air inlet)		*****		*****		*****		*****		*****		*****		*****	
4	CARTRIDGE/ELEMENT (Fuel filter, Side of engine)		16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1	16403-99011	1
5	CARTRIDGE/ELEMENT (Oil filter, By-pass, Side of engine)		15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1	15274-99986	1
	CARTRIDGE/ELEMENT (Oil filter, Full-flow, Side of engine)		15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1	15274-99985	1
6	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****		*****		*****		*****	
7	ELEMENT KIT (Fuel filter, Option)		*****		*****		*****		*****		*****		*****		*****	

Remarks

※1: The engine number should be informed us at placing an order.

GR-500N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-500N-1-00101	GR-500N-1-00102	GR-500N-1-00103	GR-500N-1-00104	GR-500N-1-00105				
HYDRAULIC OIL CIRCUIT											
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1	366-707-50010	1	366-707-50010	1	
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1	336-600-07511	1	336-600-07511	1	
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1	366-701-09511	1	366-701-09511	1	
4	ELEMENT (Line filter, On winch circuit)		366-719-75040	1	366-719-75040	1	366-719-75040	1	366-719-75040	1	
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2	366-455-45010	2	366-455-45010	2	366-455-45010	2	
DRIVING POWER TRANSMISSION SYSTEM											
1	ELEMENT (Oil filter on torque converter circuit, Front of engine)		366-712-79510	1	366-712-79510	1	366-712-79510	1	366-712-79510	1	
2	BREATHER (Air breather, On transmission)		363-702-07610	1	363-702-07610	1	363-702-07610	1	363-702-07610	1	
3	BREATHER (Air breather, On torque converter)		*****		*****		*****		*****		
4	ELEMENT (Line filter, Inside of transmission)		*****		*****		*****		*****		
ENGINE ※1			Nissan GE13		Nissan GE13		Nissan GE13		Nissan GE13		
1	ELEMENT INNER (Air cleaner, On air inlet)		363-612-05200	1	363-612-05200	1	363-612-05200	1	363-612-05200	1	
	ELEMENT OUTER (Air cleaner, On air inlet)		363-612-05210	1	363-612-05210	1	363-612-05210	1	363-612-05210	1	
2	CARTRIDGE (Fuel filter, Side of engine)		16403-99014	1	16403-99014	1	16403-99014	1	16403-99014	1	
3	CARTRIDGE (Oil filter, Side of engine)		15274-NY025	1	15274-NY025	1	15274-NY025	1	15274-NY025	1	
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****		*****		*****		*****		

Remarks
 ※1 : The engine number should be informed us at placing an order.

GR-600N-1

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-600N-1-00101										
HYDRAULIC OIL CIRCUIT													
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1									
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1									
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1									
4	ELEMENT (Line filter, On winch circuit)		366-719-75040	1									
5	ELEMENT (Filter, Inside of solenoid valve on automatic stop circuit)		366-455-45010	2									
DRIVING POWER TRANSMISSION SYSTEM													
1	ELEMENT (Oil filter on torque converter circuit, Front of engine)		366-712-79510	1									
2	BREATHER (Air breather, On transmission)		363-702-07610	1									
3	BREATHER (Air breather, On torque converter)		*****										
4	ELEMENT (Line filter, Inside of transmission)		*****										
ENGINE ※1			Nissan GE13										
1	ELEMENT INNER (Air cleaner, On air inlet)		363-612-05200	1									
	ELEMENT OUTER (Air cleaner, On air inlet)		363-612-05210	1									
2	CARTRIDGE (Fuel filter, Side of engine)		16403-99014	1									
3	CARTRIDGE (Oil filter, Side of engine)		15274-NY025	1									
4	ELEMENT (Water separator of fuel, Side of fuel tank)		*****										

Remarks

※1 : The engine number should be informed us at placing an order.

GR-700N-1 *不明

Part No. and Q'ty List of Element/Filter/Cartridge/Breather

NO.	PART NAME (LOCATION)	CRANE SPEC. NO.	GR-700N-1-00101	GR-700N-1-00102						
HYDRAULIC OIL CIRCUIT										
1	ELEMENT (Oil filter on return circuit, Inside of hydraulic oil tank)		366-707-50010	1	366-707-50010	1				
2	ELEMENT (Air breather, On hydraulic oil tank)		336-600-07511	1	336-600-07511	1				
3	CARTRIDGE (Oil filter on return circuit, Front of hydraulic oil tank)		366-701-09511	1	366-701-09511	1				
4	ELEMENT (Oil filter on outrigger circuit, Lower of center joint)		366-726-15010	1	366-726-15010	1				
5	ELEMENT (Line filter, On winch circuit)		366-719-75040	1	366-719-75040	1				
6	ELEMENT (Line filter, On 3rd winch circuit)		*****		*****					
7	ELEMENT (Filter, Inside of solenoid valve for automatic stop circuit)		366-455-45010	2	366-455-45010	2				
DRIVING POWER TRANSMISSION SYSTEM										
1	ELEMENT (Oil filter on torque converter circuit, Front of engine)		366-712-79510	1	366-712-79510	1				
2	BREATHER (Air breather, On transmission)		363-700-55710	1	363-700-55710	1				
3	BREATHER (Air breather, On torque converter)		*****		*****					
4	ELEMENT (Line filter, Inside of transmission)		363-504-65380	1	363-504-65380	1				
ENGINE ※1			Mitsubishi 6D16-TLU2A		Mitsubishi 6D16-TLU2A					
1	ELEMENT (Air cleaner, On air inlet)		363-611-55010	1	363-611-55010	1				
2	CARTRIDGE (Fuel filter, Side of engine)		ME035393	1	ME035393	1				
3	CARTRIDGE (Oil filter, Side of engine)		ME074013	1	ME074013	1				
4	ELEMENT (Water separator of fuel, Side of fuel tank)		348-801-77540	1	348-801-77540	1				

Remarks

※1 : The engine number should be informed us at placing an order.